

# CITIZEN®

## CX-185III

**Printing Calculator**

**Machine à Calculer Imprimante**

**Druckrechner**

**Calculadora Impresora**

**Calcolatore con Stampante Incorporata**

**Печатающий калькулятор**

**Calculadora com Impressora**

**Kalkulator z drukarką**

**حاسبة طابعة**

**Kalkulator med printer**

**Rekenmachine met printer**

**Kalkulator Cetak**

**打印式计算器**

**Αριθμομηχανή με δυνατότητα εκτύπωσης**

**Instruction Manual**

**Manual de Instrucciones**

**Manual de Instrução**

**Anweisungshandbuch**

**Mode d'emploi**

**Инструкция по эксплуатации**

**Instruzioni d'uso**

**Instrukcja obsługi**

**كتيب التعليمات**

**Brugsvejledning**


**Gebbruiksaanwijzing**

**Petunjuk Penggunaan**

**使用说明书**

 
 
 
 



 

 


 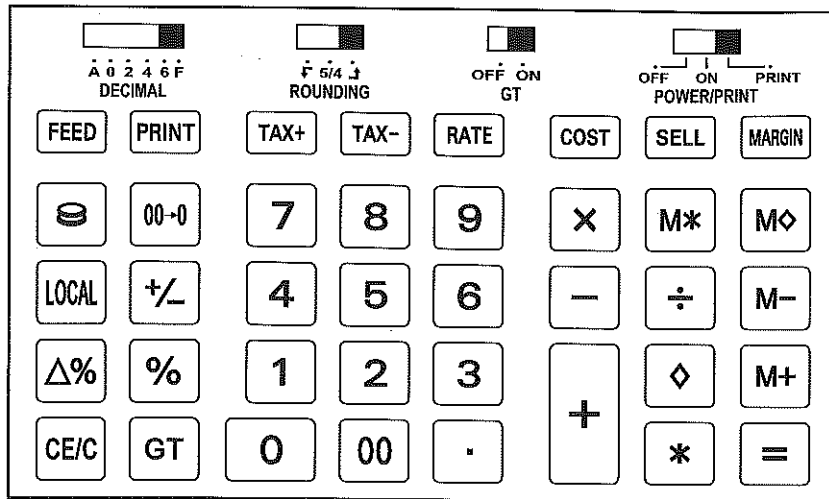
**Οδηγίες χρήσης**


## KEYS AND SWITCHES DESCRIPTION



- 0** to **9** **00** ..... **Numerical key**  
Used to enter number into calculator.
- .** ..... **Decimal point key**  
Used to enter decimal point.
- +/-** ..... **Change sign key**  
Reverse the sign of the data of the X-register.
- ×** **÷** ..... **Multiplication and division key**  
Stores multiplication and division orders and performs multiplication and division orders stored previously.  
Perform repeat multiplication and division calculation.
- =** ..... **Equal key**  
Performs multiplication, division, %, constant calculations and other calculations.
- 00->0** ..... **Digit Shift Key**  
Shift right the displayed number per digit before any function key be pressed.

- CE/C** ..... **Clear entry key**  
When this key is pressed after an entry of a number. Clear entry number.  
In other situation, clear display and all registered calculations except memory
- %** ..... **Percent key**  
Performs percent calculations.
- ◇** ..... **Sub total key**  
Used to display and print the contents of the total memory.
- \*** ..... **Total key**  
Display and print the contents of the total memory and clears it.
- +** ..... **Plus key**  
Adds an amount to the accumulator. To add the same amount more than one time (repeat addition), enter that amount once and depress the Plus key as many times as necessary. If this key is depressed immediately after **%** key, it works as percent plus key.
- ..... **Minus key**  
To subtract the same amount more than one time (repeat subtraction), enter that amount once and depress the Minus key as many times as necessary. If this key is depressed immediately after **%** key, it works as percent minus key.
- M\*** ..... **Memory total key**  
Display and print the contents of the independent memory and clears it.
- M◇** ..... **Memory subtotal key**  
Display and print the contents of the independent memory.
- FEED** ..... **Paper feed key**

-  ..... **Memory Plus key**  
Adds an amount to memory. If there is a live calculation pending, the Memory plus key will complete the calculation and accumulate the result to Memory.
-  ..... **Memory Minus key**  
Subtracts an amount from memory. If there is a live calculation pending, the Memory Minus key will complete the calculation and subtract the amount from Memory.
-  ..... **Tax include key**  
Calculate amount including TAX with TAX rate.
-  ..... **Discount key**  
Calculate amount excluding TAX with TAX rate.
-  ..... **TAX rate preset key**  
Used to enter TAX rate.
-  ..... **Print key**  
It will print a live entry as an identifier as an invoice number with “#” mark on left most side of roll paper.
-  ..... **Grand Total key**  
Display and print the contents of the grand total memory. Press GT key twice to recall and clear GT memory.
-  ..... **LOCAL currency key**
-  ..... **FOREIGN currency key**
-    ..... **Do COST, SELL, MARGIN calculation**
-  ..... **Delta Percent key**  
Automatically compares any two amounts and then calculates and prints the percent change.

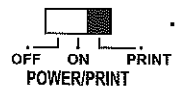

- ..... **Decimal select switch**  
A ..... Add mode  
F ..... Full-floating  
0,2,4,6 ..... Fixed decimal point.
- ..... **Rounding switch**  
5/4 ..... Round off  
↓ ..... Round down  
↑ ..... Round up
- ..... **Grand total memory switch**  
OFF Grand total memory is not activated.  
ON Final results of additions and subtractions are automatically accumulated in the GT memory according to sign.
- ..... **POWER / PRINT**  
OFF Power is off.  
ON Power is on but printer is disabled.  
PRINT Printer is activated.

**NOTE: THE SOCKET-OUTLET SHALL BE INSTALLED NEAR THE EQUIPMENT AND SHALL BE EASILY ACCESSIBLE.**