

CL-S400DT AUTO-CUTTER INSTALLATION GUIDE FOR SERVICE REPRESENTATIVES


⚠ Caution

This document is intended for use by service representatives. Installation of the auto-cutter will be performed by a service representative, so please contact your supplier for assistance.

Installing the cutter stand unit


- 1 Check to make sure that the printer's power switch is turned off, then disconnect the power cord.

- 2 Press the cover open lever, and then open the printer cover.

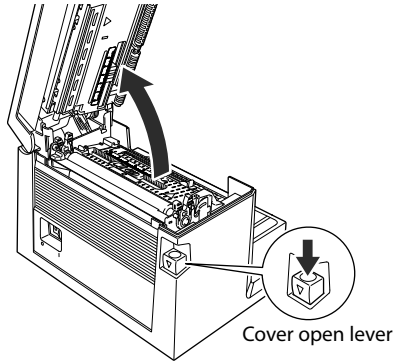


- 3 Lift and remove the front cover from the printer.

Note Keep the removed cover in a safe place, because it is used when the auto cutter has been removed.

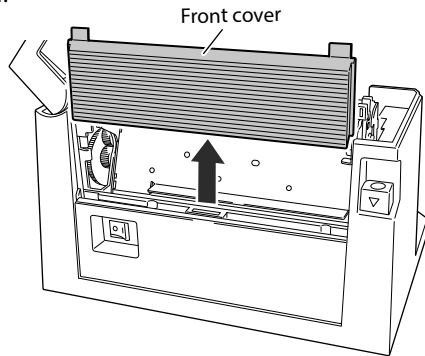


- 4 Open the switch cover.

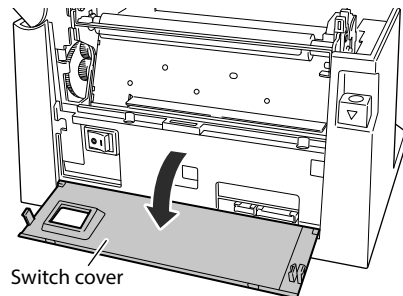


↓ Continued below


- 5 Align the protrusions (2 locations) on the cutter stand unit to the internal groove of the printer and mount the unit so it rides on top of the metal plate section of the printer.

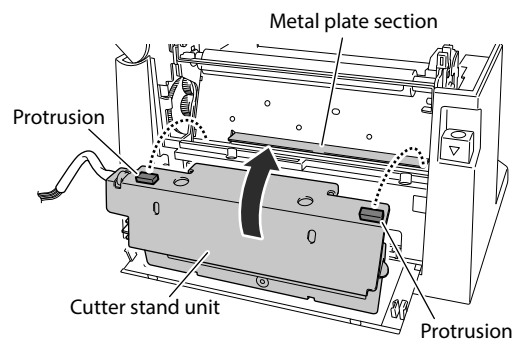

- 6 Secure the cutter stand unit by using the attached screws (2 screws).

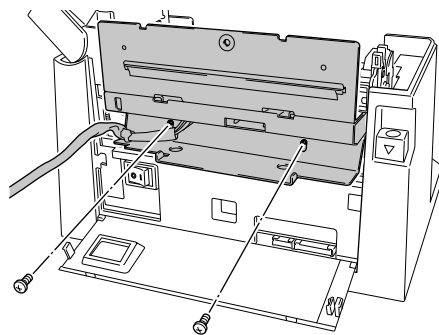


Note To prevent the cutter stand unit from being attached in a tilted position, fix it by pressing it against the underside.

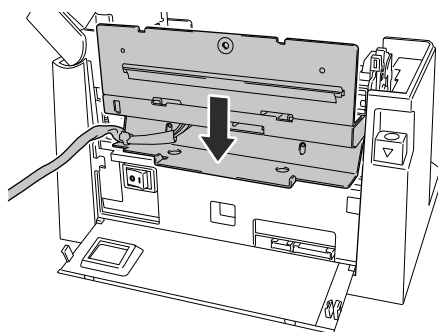


- 7 Pull out the cutter stand unit cable from inside the printer as shown in the figure.

Note Be very careful when you pull out the cable. Make sure that the cable does not get pinched by the cover when closing the switch cover.

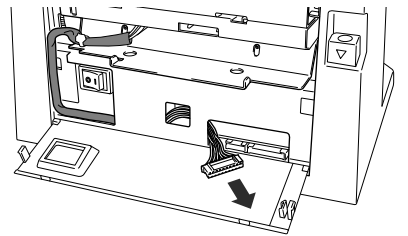


- 8 Plug the connector of the cutter-stand-unit cable into the optional connector on the printer.

Note The connector cannot be connected if it is inserted in the wrong orientation unless force is used! Check the orientation of the connector carefully.

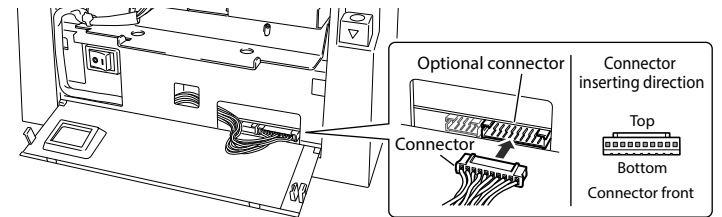


Note Make sure that the connector is inserted all the way in.

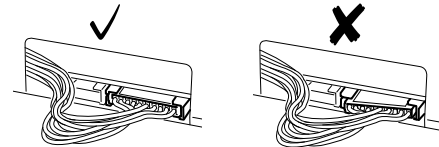


Installing the cutter unit


- 9 Plug the connector of the cutter-unit cable into the connector on the cutter stand unit.

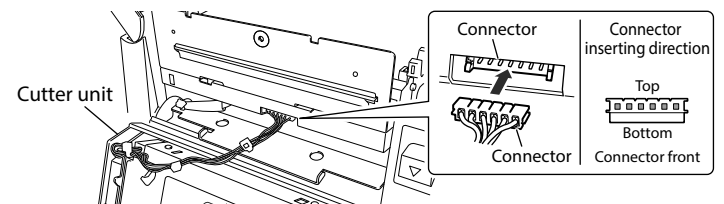

Note Make sure that the connector is inserted all the way in.

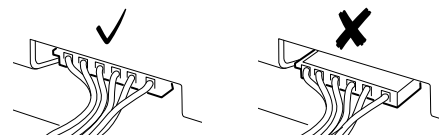


- 10 ① Align the grooves on the lower portion of the cutter unit (2 locations) with the protrusions (2 locations) on the cutter stand unit to attach the cutter unit.
② Secure the cutter unit using a cross-point ('Phillips') screwdriver for the screw attached to the unit. Please make sure that the cutter unit does not pinch the cable.

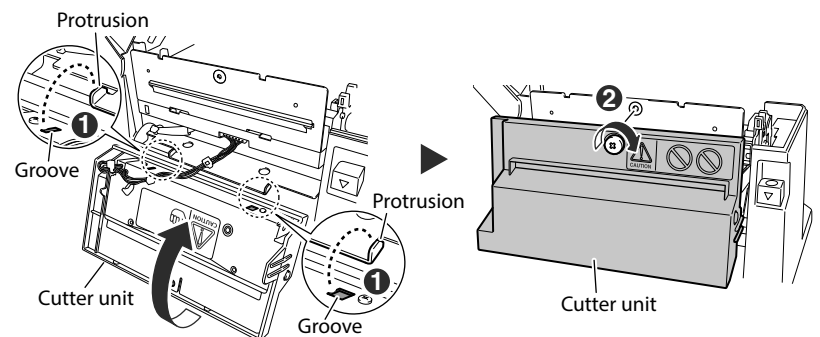

- 11 When the cutter unit is installed, close the switch cover opened in step 4 in its original position.

- 12 Close the printer cover.

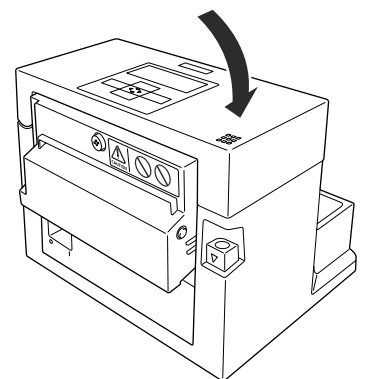

- 13 Connect the power cord and turn on the power switch of the printer.

Note Removing the cutter unit

To remove the cutter unit from the printer, follow the installation steps in reverse order. Hold the end of the cutter unit by your hand in order that the cutter unit does not fall from the printer when removing the fastening screw.