


PEELER UNIT INSTALLATION GUIDE FOR CL-S400DT

! Caution


This guide is provided for use by service representatives. Service representatives install the peeler unit, so notify the supplier who sold it to you.

- 1** Check to make sure that the printer's power switch is turned off, then disconnect the power cord.
- 2** Press the cover open lever, and then open the printer cover.

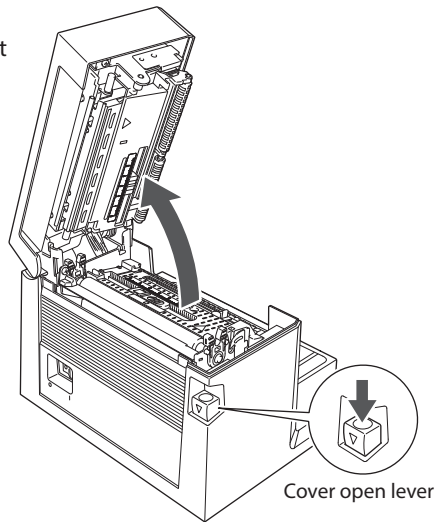


- 3** Lift and remove the front cover from the printer.

Note Keep the removed cover in a safe place, because it is used when the peeler unit has been removed.

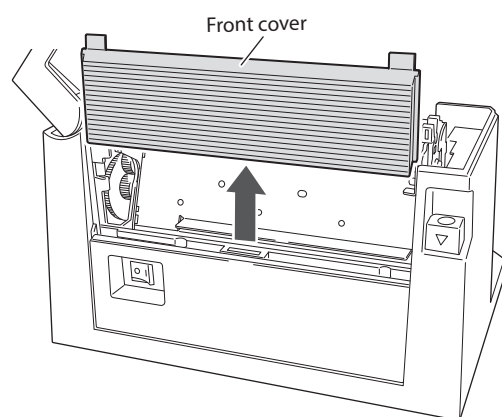


↓ Continued below

- 4** Open the switch cover.

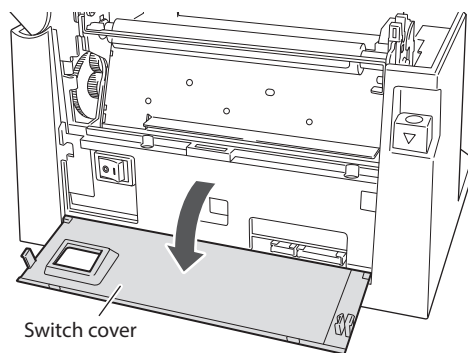


- 5** Install the peeler unit by aligning the pins (2 locations) on the bottom of the peeler unit with the alignment holes on the printer.

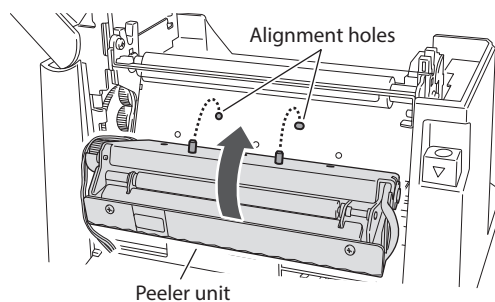


- 6** Slide the release knob of the peeler unit to the left and open the peeler unit.
- 7** Secure the peeler unit by using the attached screws (3 screws). When the peeler unit is secure, close the peeler unit.

Note Be careful not to pinch the wiring cable from the peeler unit.

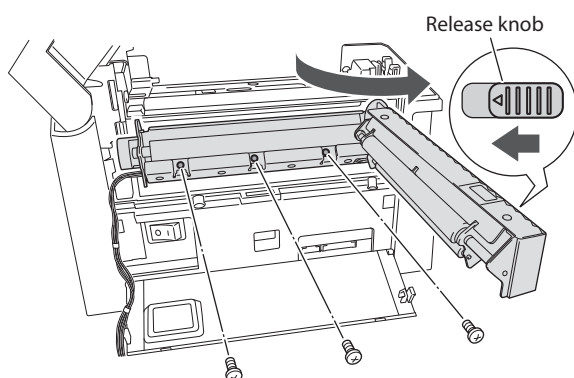


- 8** Pull out the peeler unit cable from inside the printer as shown in the figure.

Note Be very careful when you pull out the cable. Make sure that the cable does not get pinched by the cover when closing the switch cover.

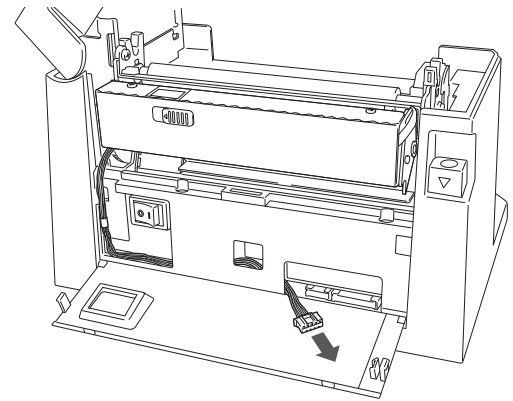


- 9** Plug the connector of the peeler unit cable into the optional connector on the printer.

Note The connector cannot be connected if it is inserted in the wrong orientation unless force is used! Check the orientation of the connector carefully.

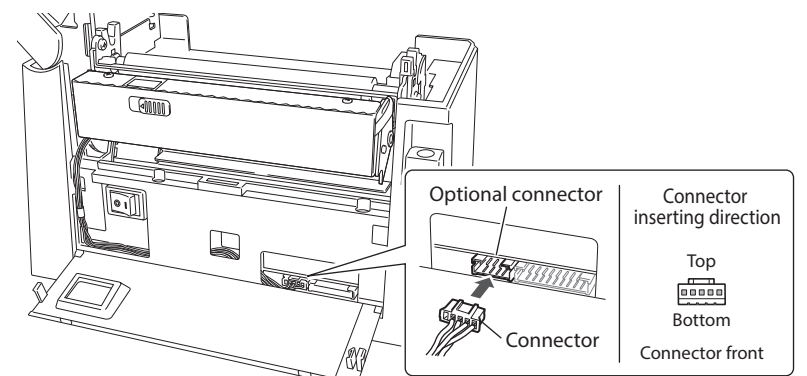

- 10** When the cutter unit is installed, close the switch cover opened in step 4 in its original position.

- 11** Close the printer cover.

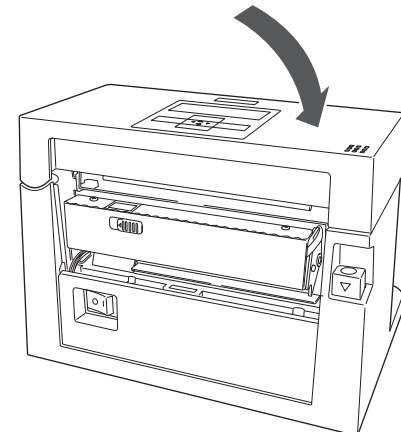

- 12** Connect the power cord and turn on the power switch of the printer.

Note Removing the peeler unit

To remove the peeler unit from the printer, follow the installation steps in reverse order. If the screws that fasten the peeler unit are removed, the unit may fall from the printer, so hold the peeler unit with your hand while loosening the fastening screws.

CITIZEN SYSTEMS AMERICA CORPORATION

1411 West 190th Street, Suite 675
Gardena, CA 90248
Tel: (310) 781-1460
Fax: (310) 781-9152
<http://www.citizen-systems.com>

CITIZEN SYSTEMS JAPAN CO., LTD.

6-1-12, Tanashi-cho, Nishi-Tokyo-shi
Tokyo, 188-8511, Japan
Tel: +81 (0) 42 468 4608
Fax: +81 (0) 42 468 4687
<http://www.citizen-systems.co.jp>

CITIZEN SYSTEMS EUROPE GmbH

Otto-Hirsch-Brücken 17
70329 Stuttgart
Germany
Tel: +49 (0) 711 49032-0
Fax: +49 (0) 711 49032-45
<http://www.citizen-europe.com>

Elizabeth House, 56-60 London Road
Staines-Upon-Thames, TW18 4HF
United Kingdom
Tel: +44 (0) 20 8893 1900
Fax: +44 (0) 20 8893 0080

CITIZEN is a registered trademark of CITIZEN WATCH CO., Japan.
CITIZEN es una marca registrada de CITIZEN WATCH CO., Japón.
Copyright © 2016 by CITIZEN SYSTEMS JAPAN CO., LTD.