
## CITIZEN

# Thermal Transfer Barcode & Label Printer CL-S621 II & CL-S631 II

# USER'S MANUAL



## WEEE MARK

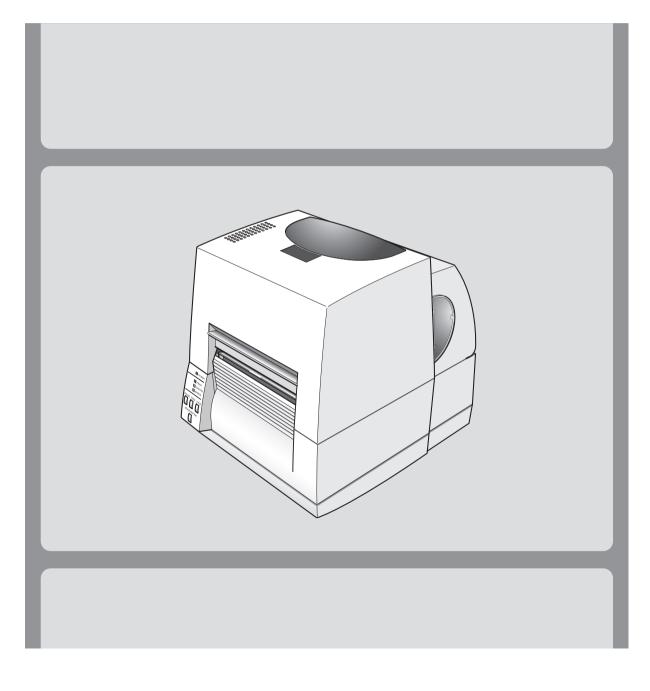

If you want to dispose this product, do not mix with general household waste. There is a separate collection systems for used electronics products in accordance with legislation under the WEEE Directive and is effective only within European Union.



Wenn Sie dieses Produkt entsorgen wollen, dann tun Sie dies bitte nicht zusammen mit dem Haushaltsmüll. Es gibt im Rahmen der WEEE-Direktive innerhalb der Europäischen Union gesetzliche Bestimmungen für separate Sammelsysteme für gebrauchte elektronische Geräte und Produkte.



Si vous souhaitez vous débarrasser de cet appareil, ne le mettez pas à la poubelle avec vos ordures ménagères. Il existe un système de récupération distinct pour les vieux appareils électroniques conformément à la législation WEEE sur le recyclage des déchets des équipements électriques et électroniques qui est uniquement valable dans les pays de l'Union européenne.

Les appareils et les machines électriques et électroniques contiennent souvent des matières dangereuses pour l'homme et l'environnement si vous les utilisez et vous vous en débarrassez de façon inappropriée.



Si desea deshacerse de este producto, no lo mezcle con residuos domésticos de carácter general. Existe un sistema de recogida selectiva de aparatos electrónicos usados, según establece la legislación prevista por la sobre residuos de aparatos eléctricos y electrónicos (RAEE), vigente únicamente en la Unión Europea.

Se desiderate gettare via questo prodotto, non mescolatelo ai rifiuti generici di casa. Esiste un sistema di raccolta separato per i prodotti elettronici usati in conformità alla legislazione RAEE, valida solo all'interno dell'Unione Europea.



lt -

Deponeer dit product niet bij het gewone huishoudelijk afval wanneer u het wilt verwijderen. Er bestaat ingevolge de WEEE-richtlijn een speciaal wettelijk voorgeschreven verzamelsysteem voor gebruikte elektronische producten, welk alleen geldt binnen de Europese Unie.

Da Hvis du vil skille dig af med dette produkt, må du ikke smide det ud sammen med dit almindelige husholdningsaffald. Der findes et separat indsamlingssystem for udtjente elektroniske produkter i overensstemmelse med lovgivningen under WEEE-direktivet, som kun er gældende i den Europæiske Union.

Por

Se quiser deitar fora este produto, não o misture com o lixo comum. De acordo com a legislação que decorre da Directiva REEE – Resíduos de Equipamentos Eléctricos e Electrónicos, existe um sistema de recolha separado para os equipamentos electrónicos fora de uso, em vigor apenas na União Europeia.



Jeżeli zamierzasz pozbyć się tego produktu, nie wyrzucaj go razem ze zwykłymi domowymi odpadkami. Według dyrektywy WEEE obowiązującej w Unii Europejskiej dla używanych produktów elektronicznych należy stosować oddzielne sposoby utylizacji.



## CONTENTS

## **Before Operation**

INTRODUCTION	4
COMPLIANCE STATEMENT FOR EUROPEAN USERS	5
FCC COMPLIANCE STATEMENT FOR AMERICAN USERS	5
EMI COMPLIANCE STATEMENT FOR CANADIAN USERS	6
ETAT DE CONFORMITE EMI A L'USAGE DES UTILISATEURS CANADIENS	6
IMPORTANT SAFETY INSTRUCTIONS	7
NOTICE	8
SAFETY INSTRUCTIONS	9

## Chapter 1 Setup

Confirmation of Carton Contents	11
Part Names and Functions	12
Connection to Power	
Driver Installation	
Connection to a Computer	

## **Chapter 2 Printer Operation**

Power ON/OFF	20
Normal Operating Mode	21
Setting the Media	
Setting the Ribbon	
Mode Settings	
Quick Setup of the Print Method	
Selecting the Ribbon Winding Direction	46
Emulation Auto Detect: Cross-Emulation <sup>™</sup>	46
Manually Selecting the Printer Emulation	47

## **Chapter 3 Printer Adjustments**

Sensor Adjustments4	18
Media Thickness Adjustment5	53
Media Width Adjustment5	
Adjusting the Ribbon	
Cleaning	

## **Appendixes**

Troubleshooting	58
Specifications	
Interfaces	66

## INTRODUCTION

Thank you for purchasing a Citizen CL-series label printer offering high performance thermal transfer printing on media up to 4.1 inches wide.

## Main Features

#### <High-speed, high-quality printing>

This printer can be used for high-speed high-quality printing thanks to its direct thermal method and thermal transfer method that use a line thermal printhead together with its 32 bit RISC CPU and its 'history control IC'.

#### <Easy operation>

- It is easy to change the printer's settings on the operation panel, thanks to its unique and simple VuePrint menu system.
- Its high-lift printhead and mechanism means that media and ribbon can be loaded with ease and it is constructed for easy thermal printhead cleaning, etc.
- Media width adjustment, media thickness adjustment, and media sensor adjustment can all be made easily by the user using the colour-coded operator controls.

#### <Multi Programming Language>

This printer contains the Datamax<sup>®</sup>, Zebra<sup>®</sup> and Eltron<sup>®</sup> emulations and will automatically detect the language using the Cross-Emulation<sup>™</sup> feature.

#### <Interface>

An industry standard RS232 serial port and USB (complies with USB 2.0, full-speed) port are standard equipment, for quick data transfer and printing.

#### <Optional interface>

Additional connectivity is available with an optional internally-housed IEEE1284 parallel port, an Ethernet interface and a wireless LAN print server.

#### <Optional auto-cutter / peeler unit>

The auto-cutter and peeler units are designed so that they can be installed easily.

#### <Adjustable sensors>

The adjustable media sensors - which allow the sensors to be positioned in different locations across the media - are standard features making the printer ideal for use with special media.

#### <Installation>

The interface, power switch etc. are installed towards the back and the top cover opens and closes vertically so that the sides of the printer are not restricted.

## COMPLIANCE STATEMENT FOR EUROPEAN USERS

CE marking shows conformity to the following criteria and provisions: Low Voltage Directive (2014/35/EU), EMC Directive (2014/30/EU), and RoHS directive (2011/65/EU) Full text of the EU declaration of conformity is available at the following internet address:

http://www.citizen-systems.co.jp/en/printer/download/eu\_doc.html

## FCC COMPLIANCE STATEMENT FOR AMERICAN USERS

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

\*The model name printed on the CL-S621 II/631 II rating label is JM62-M01/JM63-M01.

## EMI COMPLIANCE STATEMENT FOR CANADIAN USERS

#### This Class A digital apparatus complies with Canadian ICES-003.

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. This equipment is designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Use shielded cables to connect this device to computers.

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

## ETAT DE CONFORMITE EMI A L'USAGE DES UTILISATEURS CANADIENS

#### Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Cet équipment produit et utilise l'énergie à radiofréquences et s'il n'est pas installé et utilisé correctment, c'esst à dire en accord strict avec les instructions du fabricant, il risque de provoquer des intérferences avec la réception de la radio et de la télévision.

Le présent appareil numérique n'émet pas de bruite radio électriques dépassant les limites applicables aux appareils numériques de la classe A prescrites dans le Réglement sur le brouillage radioélectrique édicté par le ministère des Communications du Canada.

Cet équipment est conçu pour fournir une protection satisfaisante contre de telles interférences dans une installation résidentielle. Cependant, il n'y a pas de garantie contre les interférences avec les réceptions radio ou télévision, provoquées par la mise en et hors circuit de l'équipment; aussi, il est demandé a l'utilisateur d'essayer de corriger l'interférence par l'une ou plus des mesures suivantes:

- Réorienter l'antenne de réception.
- Installer l'ordinateur autre part, par égard pour le récepteur.
- Brancher l'ordinateur dans une prise de courant différente de façon à ce que l'ordinateur et le récepteur soient branchés sur des circuits différents.

## **IMPORTANT SAFETY INSTRUCTIONS**

- Read all of these instructions and save them for later reference.
- Follow all warnings and instructions marked on the product.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- Do not use this product near water.
- Do not place this product on an unstable cart, stand or table. The product may fall, causing serious damage to the product.
- Slots and openings on the cabinet and the back or bottom are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, do not block or cover these openings. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation unless proper ventilation is provided.
- This product should be operated from the type of power source indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
- This product is equipped with a three-pronged plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- Do not allow anything to rest on the power cord. Do not locate this product where the cord will be walked on.
- If an extension cord is used with this product, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord ampere rating. Also, make sure that the total of all products plugged into the wall outlet does not exceed 15 amperes for 120V outlet and 7.5 amperes for 220V-240V outlet.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
- Except as explained elsewhere in this manual, don't attempt to service this product yourself. Opening and removing those covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks. Refer all servicing on those compartments to service personnel.
- The mains plug on this equipment must be used to disconnect mains power. Please ensure that the socket outlet is installed near the equipment and shall be easily accessible.
- Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- A. When the power cord or plug is damaged or frayed.
- B. If liquid has been spilled into the product.
- C. If the product has been exposed to rain or water.
- D. If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
- E. If the product has been dropped or the cabinet has been damaged.
- F. If the product exhibits a distinct change in performance, indicating a need for service.

## NOTICE

- Before use, be sure to read this manual. And keep it handy for reference when needed.
- The contents of this manual may change without prior notice.
- Reproduction, transfer, or transmission of the contents of this manual without prior consent is strictly prohibited.
- We are not liable for any damage resulting from the use of the information contained herein, regardless of errors, omissions, or misprints.
- We are not liable for any problems resulting from the use of optional products and consumable supplies other than the designated products contained herein.
- Do not handle, disassemble or repair the parts other than those specified in this manual.
- We are not liable for any damage caused by user's erroneous use of the printer and inadequate environment.
- Data residing in the printer is temporary. Therefore, all data will be lost if power is lost. We are not liable for any damage or loss of profits caused by data loss due to failures, repairs, inspections, etc.
- Please contact us if there are any mistakes or ambiguities within this manual.
- If there are missing or incorrectly collated pages in this manual, contact us to obtain a new manual.

CITIZEN is a registered trademark of Citizen Watch Co., Ltd. CITIZEN est une marque enregistrée de Citizen Watch Co. Ltd.

Copyright © 2019 by CITIZEN SYSTEMS JAPAN CO., LTD.

## **SAFETY INSTRUCTIONS** which must be strictly observed !

- To prevent personal injury or property damage, the following shall be strictly observed.
- The degree of possible injury and damage due to incorrect use or improperly following instructions is described below.

<b>Warning</b>	Indicates a situation which, if not observed and handled properly, could result in death or serious injury.
<b>A</b> Caution	Indicates a situation which, if not observed and handled properly, could result in injury.





Never perform the following. If not avoided, these may cause damage or trouble to the printer or cause the printer to overheat and release smoke and cause burns or an electrical shock. If the printer is damaged or is malfunctioning, be sure to turn the printer off immediately and remove the power cord from the outlet, then consult our service personnel.

- Do not place the printer in a poorly ventilated area, or shut off the air vent of the printer.
- Do not place the printer where chemical reactions occur, such as in laboratories or where air is mixed with salt or gas.
- Do not use a power voltage or frequency other than those specified.
- Do not plug/unplug the power cord or attach/detach the interface cable by simply grabbing the power cord or interface cable. Do not pull or carry the printer when the tension of the power cord or interface cable is increased.
- Do not drop or put foreign matter such as clips and pins into the printer. This may cause problems.
- Do not plug the power cord into an outlet with many loads.
- Do not spill drinks such as tea, coffee and juice on the printer or spray insecticide on the printer. If drink or water is spilled, first be sure to turn the power off and remove the power cord from the outlet, then consult our service personnel.
- Do not disassemble or modify the printer.

Discard or safely store the plastic packing bag. This bag should be kept away from children. If the bag is pulled over a child's head, it may cause suffocation.

#### **General Precautions**

## A Caution

- Prior to operation, read the safety instructions carefully and observe them.
- Do not drop or put foreign matter such as clips and pins into the printer. This may cause problems.
- Be careful when moving or carrying the printer. Dropping the printer may cause injury or property damage.
- Make sure if you open the top cover, it is opened all the way. If only partially open, the cover could slam shut, possibly causing injury.
- When the cover is open, be careful of the corners of the cover. They could cause injury.
- Do not open the printer during printing.
- When cleaning the surface of the printer case, do not use the cloth that is soaked in thinner, trichloroethylene, benzine, ketone or similar chemicals.
- Do not use the printer where there is a lot of oil, iron particles, or dust.
- Do not spill liquids or spray insecticide on the printer.
- Do not jolt or impact to the printer by stepping on, dropping or hitting the printer.
- Operate the control panel properly. A careless, rough handling may cause problems or malfunction. Do not use such sharp-edged tool as a ballpoint pen for operation.
- Be careful of the edges of the plates so injury or property damage is possible.
- If a problem occurs during printing, stop the printer immediately and unplug the power cord from the outlet.
- When printer trouble occurs, do not try to dissemble it. Instead, consult our service personnel.

#### **Precautions When Installing the Printer**



- Prior to operation, read the safety instructions carefully and observe them.
- Do not use or store the printer near fire, excessive moisture, in direct sunlight, near an air conditioner or heater or other source of unusually high or low temperature or humidity or excessive dust.
- Do not place the printer where chemical reactions occur, such as in a laboratory.
- Do not place the printer where air is mixed with salt or gas.
- The printer must sit on a firm, level surface where there is ample ventilation. Never allow the printer's air vent to be blocked by a wall or other object.
- Do not put anything on the top of printer.
- Do not place the printer near a radio or television, and do not use the same wall outlet for the printer and radio or television. Radio or television reception could be adversely affected.
- Do not put anything on the power cord or step on it.
- Do not drag or carry the printer with the power cord or interface cable.
- Avoid plugging the power cord into an outlet with many loads.
- Do not bundle the power cord when inserting the plug.
- Always grip the plug housing, not the cord, to plug/unplug the power cord.
- Make certain the power is turned off before connecting/disconnecting the interface cable.
- Avoid lengthening the signal cable or connecting it to any noise-producing device. If it is unavoidable, use the shielded cable or twisted pair for each signal.
- Place the printer near the outlet where the power cord can be unplugged easily to shut off power.
- Use the AC outlet that accepts a three-pronged plug. Otherwise, static electricity may be generated and there will be danger of electric shock.


## **Confirmation of Carton Contents**

#### **Removing the Packing Material**

The printer is shipped with adhesive tape in place to hold the top cover closed. Simply remove the two pieces of tape on either side of the top cover. Then simply open the cover by lifting up and tipping it backwards.

There is another strip of adhesive tape that must be removed which holds the mechanism closed for shipping. Remove the tape and attached paper by carefully peeling from the plastic case.

Retain the tape should you need to transport the printer again.

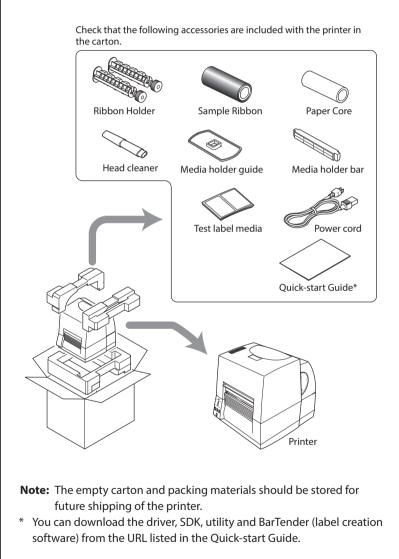


## **A** Caution

- Be careful when moving or carrying the printer and when taking the printer out of the carton. The printer may cause injury or property damage if dropped. Be sure to grip the printer housing firmly when taking it out of the carton. Do not grip the printer by the foam packing material which may break, causing the printer to drop.
- When opening the cover, open it all the way. If only part way open, the cover could slam shut, possibly causing injury.
- Be careful of the edge of the cover when the cover is opened. It may cause injury or property damage.
- Be careful of the edges of the metal plates so injury or property damage is possible.

### **Part Names and Functions**

#### **Front View**

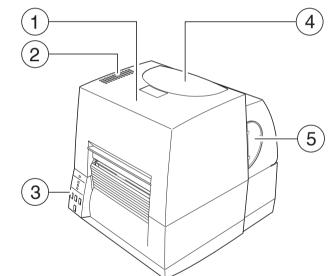

#### 1) Top cover

Is opened vertically to set media or ribbon.

#### (2) Heat discharge vent

It allows warm air to vent from the printer. Be sure not to block it with media etc.

#### **③** Operation panel

This is used to make changes and adjustments to the printer and its configuration.


#### (4) Ribbon window


The amount of ribbon remaining can be checked through this window.

#### **(5) Media window**

The amount of media remaining can be checked through this window.

**Operation Panel (p.16)** 

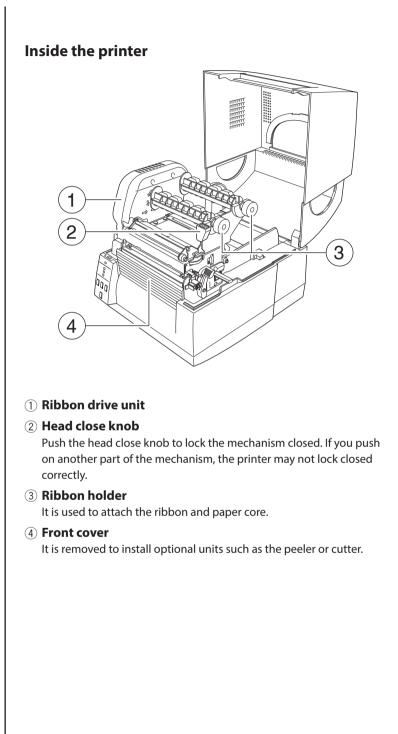




*Ribbon Balance Adjustment* (p.56)

*Media Width Adjustment* (p.54)

Ribbon Tension Adjustment (p.55)

Ribbon Balance Adjustment (p.56)

Media Thickness Adjustment (p.53)

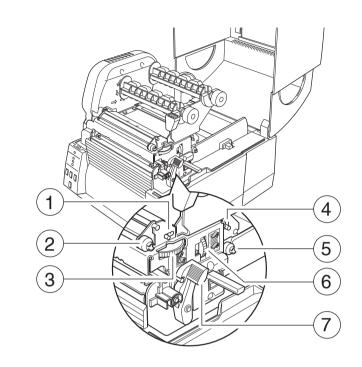

- (1) **Front (winding side) ribbon tension adjustment knob** This is adjusted according to the width of the ribbon that is used. It is also used when the ribbon is wrinkled or slips.
- ② Front (winding side) ribbon left-right balance adjustment knob

It is used to perform an adjustment when the ribbon is wrinkled. Normally set it to the center position.


- ③ Media width adjustment dial It is adjusted to match the width of the media.
- ④ Back (feeding side) ribbon tension adjustment knob This is adjusted according to the width of the ribbon that is used. Use it basically in the same way as the front adjustment knob.
- (5) Back (feeding side) ribbon left-right balance adjustment knob

It is used to perform an adjustment when the ribbon is wrinkled. Normally set it to the center position.

- 6 Media thickness adjustment dial It is adjusted to match the thickness of the media.
- Large blue-head open lever
   The head unit can be raised to install media by pushing this lever.
   It locks the head unit during printing.

Setting sensor positions. (p.25) Sensor Adjustments (p.48)

Loading roll media (p.24)

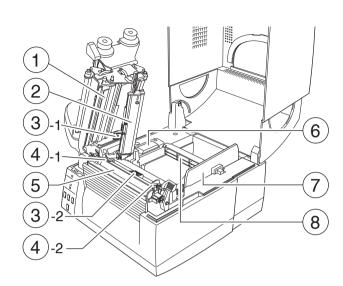

#### (1) Thermal printhead

This is the printhead. Avoid touching this with your fingertips and leaving grease or dirt on the printhead surface.

#### 2 Sensor arm

The media can be installed by raising this arm. The media can be held in place by lowering this arm.

#### ③ Upper sensor (③-1) and bottom sensor (③-2)

When used as a label detection sensor (transparent sensor), it is used by matching the sensor markings of the upper sensor and the bottom sensor. When used as a black mark detection sensor (reflective sensor), it is used by matching the sensor marking on the bottom sensor with the position of the black mark on the liner or media backing. When used as a continuous media detection sensor (reflective sensor), move the bottom sensor close to the center of the width of the media.

#### ④ Media guides (Left fixed media guide (④-1) and right movable media guide (④-2))

The end of the media is matched to the left fixed media guide, then the right side movable media guide is moved horizontally to match it to the media size. And the movable media guide is used as a guide to match the upper sensor and bottom sensor when using a label detection sensor (Transparent sensor) or continuous media detection sensor (Reflective sensor).

#### 5 Platen

Interlocked with the thermal printhead, it feeds media backwards or forwards.

#### **(6)** Optional unit connector cover


It is opened when the cables of the cutter unit and the peeler unit are connected. Do not remove during normal use.


#### ⑦ Media holder guide

This guide is moved horizontally to match the media size. The guide can be sliding it from the holder bar.

#### (8) Media holder bar

The media is supported by the media holder bar when installed in the printer.

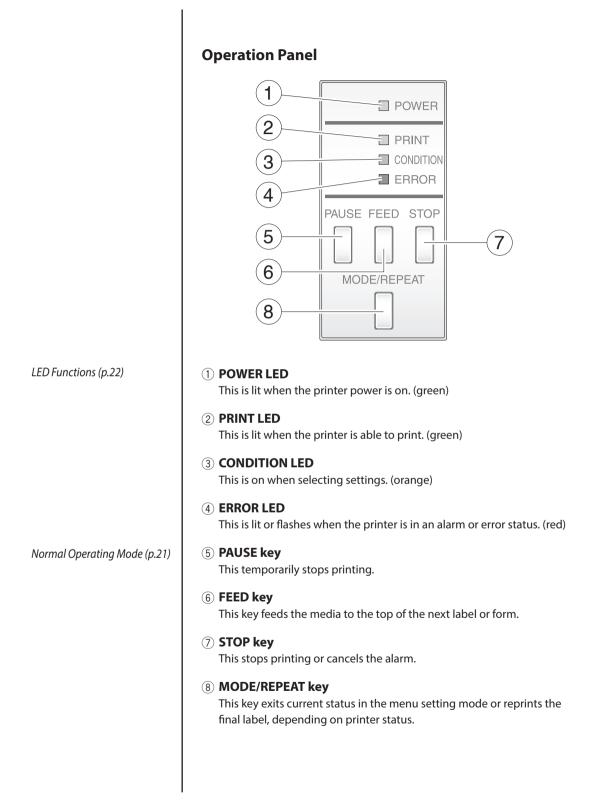


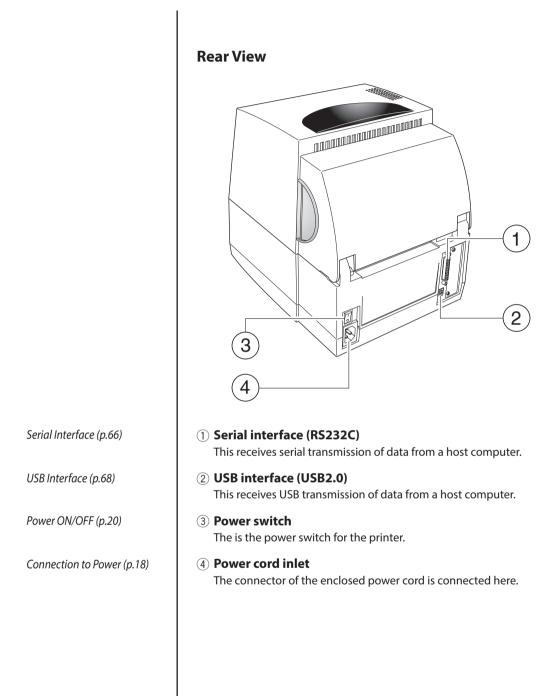

17

### **Connection to Power**

- 1. Check that the power switch to the printer is turned OFF.
- 2. Connect the connector of the power cord to the power cord inlet on the printer.
- 3. Insert the plug of the power cord in the AC outlet.

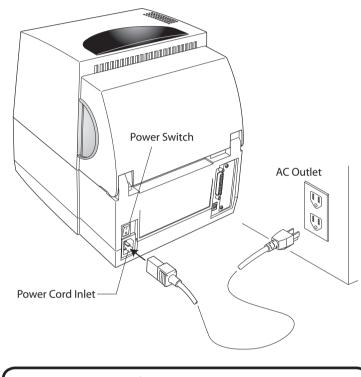

## 🕂 Caution

Use an AC outlet that accepts a three-pronged plug. Otherwise, static electricity may be generated and there will be danger of electric shock.

## **Driver Installation**

Install the printer driver onto the host computer. Printer drivers are available for download from the Citizen Systems support website. The latest documentation, drivers, utilities, and other support information are also available from this website.


https://www.citizen-systems.co.jp/en/printer/download/ Once a printer driver has been downloaded, follow the on-screen instructions to install the driver

## **Connection to a Computer**

This product has two interfaces that can be used to receive printing data: a serial port (RS232C) and a USB port (USB2.0). An optional internal Ethernet, an IEEE1284 Parallel or Wireless LAN port can be added by your dealer.

With the exception of a wireless LAN connection, an interface cable is necessary to connect the printer to a computer. To connect the cable, proceed as follows:

- 1. Turn OFF both power switches of the printer and the computer.
- 2. Connect one end of the interface cable to the interface connector on the back of the printer and secure it with locks or locking screws, where available.
- 3. Connect the other end of the interface cable to the interface connector on the computer and secure it with locks or locking screws, where available.

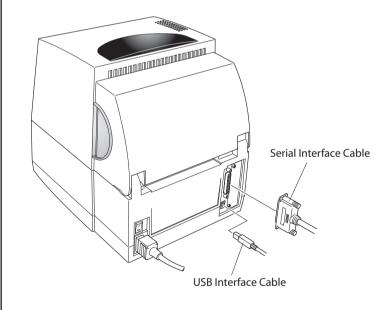

**Note:** If an optional Ethernet, an IEEE1284 Parallel or Wireless LAN port is used, contact your Citizen Systems dealer.


Serial Interface (p.66) USB Interface (p.68)

## **Chapter 2 Printer Operation**

## **Power ON/OFF**


#### Turning on the power

- 1. Turn on the power switch on the back of the printer.
- 2. The POWER and PRINT LED are lit.

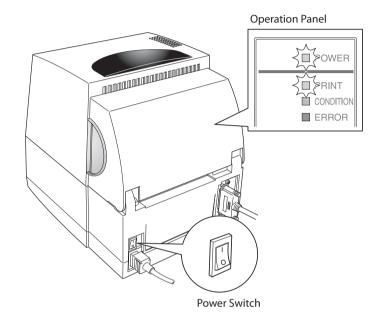

#### **Turning off the power**


- 1. Turn off the power switch on the back of the printer.
- 2. The POWER and PRINT LED go off.

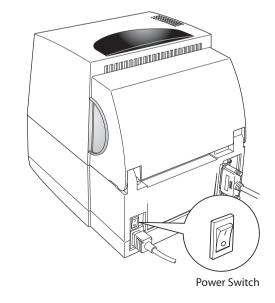

Menu Setup Mode (p.38)

### **Normal Operating Mode**

When the power is turned on, the printer enters normal operating mode. The control keys activate the following functions.

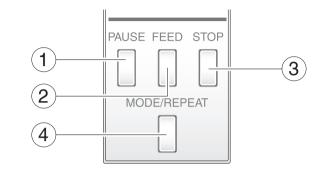

#### 1 PAUSE key: Temporarily pauses printing

- When this key is pushed once, the PRINT LED turns off and the printer temporarily pauses.
- When it is pushed during printing, the printer pauses after the label currently being printed is issued. Pressing the key a second time restarts printing and the remaining number of designated labels are printed.

#### 2 FEED key: Feeds media

- Pressing this key feeds media to the print start position. The distance it is fed is determined by automatically detecting the front end of the media when using label media, and when continuous media has been designated, a fixed quantity is fed, then feeding stops.
- When the TEAR OFF setting is effective, feeding stops when the media has been fed to the TEAR OFF location.
- When the optional cutter unit is installed, the media is fed to the cut position then it is cut.
- If the optional peeler unit is installed, the media is fed to the peeling location. When the media is pausing at the peeling position, feeding does not occur, even if the FEED key is pushed.

#### **③ STOP key: It stops printing and cancels the alarm**

- Pushing this key once during printing puts the printer in pause mode after the label is issued. It is possible to cancel 1 batch of label issuing data by pressing the STOP key for 4 seconds or longer in pause status. (The PRINT LED flashes at high speed during cancel.)
- Pushing this key once cancels the abnormal head resistance alarm.

#### ④ MODE/REPEAT key:

• Pressing this key reprints the last label in PRINT status (when the PRINT LED is lit) The last label issued depends on the selection of the "MODE/REPEAT key" menu.

#### **Normal Operating Mode**

#### **LED Functions**

#### (1) POWER LED

It lights up when printer power is turned on. (green)

#### 2 PRINT LED

This is lit when the printer is able to print. (green)

#### **3 CONDITION LED**

This is on when selecting settings. (orange)

#### (4) ERROR LED

This is lit or flashes when the printer is in error status. (red)

#### **Table of Alarm and Error Indications**

In addition to normal operating mode, when an abnormal condition is detected in the printer, an alarm sounds and each LED either lights up or flashes to indicate the type of error.

1

2

3

4

POWER

PRINT

CONDITION

ERROR

PAUSE FEED STOP

MODE/REPEAT

ltem	PRINT LED	CONDITION LED	ERROR LED
When the STOP key has been pushed	OFF	OFF	OFF
Abnormal head temperature	ONOFF		OFF
Abnormal motor temperature	ONOFF	OFFON	OFF
Head open	OFF	OFF	0000000
Media end	OFF	OFF	
Media out (media location cannot be detected)	OFF	ONOFF	
Abnormal head resistance*	OFF		
Ribbon feed error	OFF	0000000	0000000
Ribbon end	OFF	0000000	●○●○●○●○
Communication error (reception buffer overrun)			
Communication error (parity, framing)	OFF	ONOFF	OFF
Communication error (transmission buffer overflow)			
Auto cutter abnormality (jamming etc.)	OFF	OFF	ON
Auto cutter temperature abnormal		OFFON	OFF

TimeAxis  $\rightarrow$ 

\* Pushing the STOP key once cancels the alarm.

○ : ON, ● : OFF


Wide on/off marks indicate slow LED flashing. Small circle on/off marks indicate quick LED flashing.

#### **Media Sizes**

The position of label and tag media is sensed by either a label detection sensor (Transparent sensor) or a black mark detection sensor (Reflective sensor).

Label detection sensor (Transparent sensor):

Detects the gaps between label media and notches of tag media Black mark detection sensor (Reflective sensor):

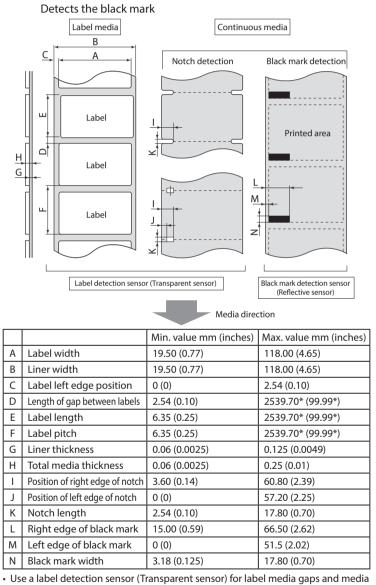

with black marks.

• Use the continuous media detection sensor (reflective sensor) for continuous media with no notches or black marks.

Use a label detection sensor (Transparent sensor) for fan fold media.


• If the label pitch is 1 inch or less, set the Small Media Adjustment menu to ON and match it to the label that uses the value of the Small Media Length menu.

Menu Setting Table (p.42)


\* For CL-S631 II, the value is 1625.60 mm (64.00 inch)



1. Push the large blue-head open lever to release the head unit, and then lift the sensor arm by hand as shown below.

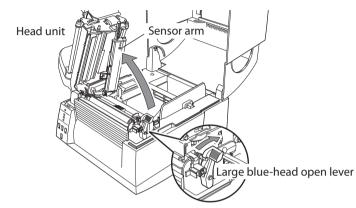

- 2. Firstly, slide the two black plastic parts of the media holder assembly together. Ensure correct alignment of the guide with the bar as it can only be installed in one direction.
- 3. Slide the roll of media over the media bar. The media guide must be on the right side of the roll of media (as viewed from the front of the printer) with the ribbed surface of the media guide touching the media roll as shown in the illustration.

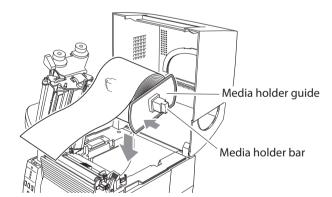


- 4. Set the media roll and media holder in to the printer as shown above. It is advisable to pull a length of media forwards and through the mechanism ready for later positioning.
- 5. Move the media roll so it is touching the leftside of the housing. Then slide the black media guide so it is touching the media on the right side.
- **Note:** Do not try to hold the media too tightly with these guides as it will cause the printer to jam during printing.

Media Sizes (p.23)


	<ul> <li>6. Select a sensor.</li> <li>With the power switched on, push the STOP key for at least 4 seconds while pushing the MODE/REPEAT key.</li> <li>Each time the key is pushed, the buzzer sounds and the selected sensor switches between the label detection sensor (transparent sensor), black mark detection sensor (reflective sensor) and continuous media detection sensor (reflective sensor).</li> <li>When the label detection sensor (transparent sensor) is selected, the buzzer sounds once.</li> <li>When the black mark detection sensor (reflective sensor) is selected, the buzzer sounds twice.</li> </ul>
	When the continuous media detection sensor (reflective sensor) is selected, the buzzer sounds thrice.
Quick Sensor Selection Method	7. Setting sensor positions.
(p.48)	<ul> <li>When using a label detection sensor (transparent sensor)</li> <li>1. Move the bottom sensor close to the center of the paper width, and use the movable media guide to align the positions of the upper sensor marker and the bottom sensor marker (white). Be careful that media with black marks does not pass the media sensor.</li> <li>2. After aligning the markers, use an item with a fine tip, such as a pen, to slide and lock the upper sensor lock (blue).</li> </ul>
	Upper sensor marker Upper sensor marker Upper sensor Higned with the marker Label detection sensor (transparent sensor) marker Movable
	Platen media guide Front
Adjusting the label detection sensor (Transparent sensor)	When using media that is 4 inches wide, position the upper sensor and the bottom sensor all the way to the right (large blue-head open lever side).

(p.49)

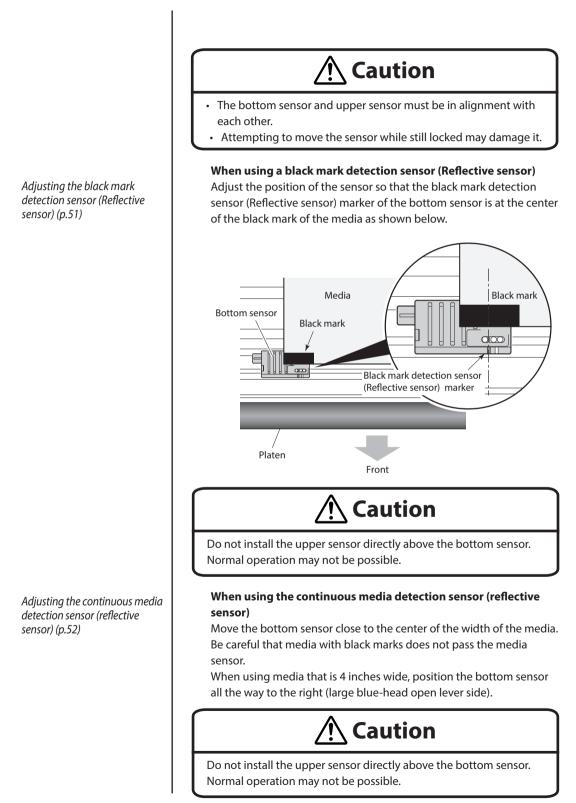


26

Media Thickness Adjustment (p.53) Media Width Adjustment (p.54) 8. Align the media with the left fixed media guide, align the right movable media guide with the media width, and lower the sensor arm.

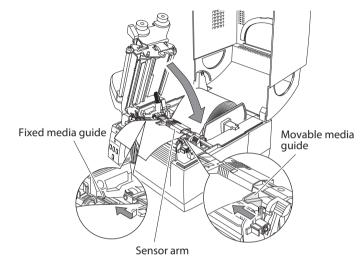


9. Push the head close knob to lower and lock the head unit. Be sure to always push the head close knob to lock the head unit. Align it with the width of the media that has been set, then set the media width and media thickness adjustment dials. See "Chapter 3 Printer Adjustments".

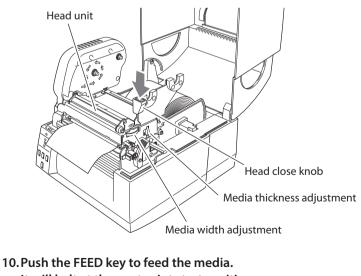


It will halt at the next print start position.

#### Loading fanfold media

1. Push the large blue-head open lever to release the head unit, and then lift the sensor arm by hand as shown below.

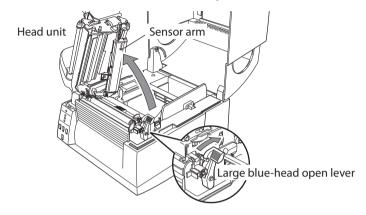

- 2. Insert the fanfold media through from the external media feed port at the back of the printer.
- 3. Leaving the specified gap from the printer, place the fanfold paper so that it is at the same height as the printer and becomes parallel with the printer as shown in the figures below.

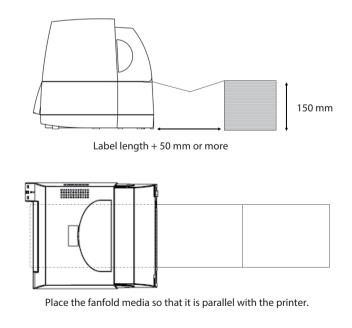

	<ol> <li>Insert the fanfold media through below media holder bar and set the holder by aligning it with the media width.</li> <li>Note: Do not try to hold the media too tightly with these guides as it will cause the printer to jam during printing.</li> </ol>
	<ul> <li>5. Select a sensor.</li> <li>With the power switched on, push the STOP key for at least 4 seconds while pushing the MODE/REPEAT key.</li> <li>Each time the key is pushed, the buzzer sounds and the selected sensor switches between the label detection sensor (transparent sensor), black mark detection sensor (reflective sensor) and continuous media detection sensor (reflective sensor).</li> <li>When the label detection sensor (transparent sensor) is selected, the buzzer sounds once.</li> <li>When the black mark detection sensor (reflective sensor) is selected, the buzzer sounds twice.</li> <li>When the continuous media detection sensor (reflective sensor) is selected, the buzzer sounds thrice.</li> </ul>
Quick Sensor Selection Method	6. Setting sensor positions.
(p.48)	<ul> <li>When using a label detection sensor (transparent sensor)</li> <li>1. Move the bottom sensor close to the center of the paper width, and use the movable media guide to align the positions of the upper sensor marker and the bottom sensor marker (white). Be careful that media with black marks does not pass the media sensor.</li> <li>2. After aligning the markers, use an item with a fine tip, such as a pen, to slide and lock the upper sensor lock (blue).</li> </ul>
	Upper sensor marker Upper sensor marker Upper sensor Aligned with the marker Upper sensor Upper sensor lock Bottom sensor (Transparent sensor) marker

Platen

Movable media guide

Front

Adjusting the label detection sensor (Transparent sensor) (p.49)

Adjusting the black mark detection sensor (Reflective sensor) (p.51)

Adjusting the continuous media detection sensor (reflective sensor) (p.52)


When using media that is 4 inches wide, position the upper sensor and the bottom sensor all the way to the right (large blue-head open lever side).

## **A** Caution

- The bottom sensor and upper sensor must be in alignment with each other.
- Attempting to move the sensor while still locked may damage it.

### When using a black mark detection sensor (Reflective sensor)

Adjust the position of the sensor so that the black mark detection sensor (Reflective sensor) marker of the bottom sensor is at the center of the black mark of the media as shown below.

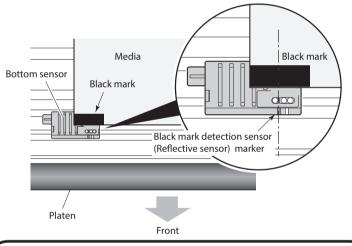

**A** Caution

Do not install the upper sensor directly above the bottom sensor. Normal operation may not be possible.

## When using the continuous media detection sensor (reflective sensor)

Move the bottom sensor close to the center of the width of the media. Be careful that media with black marks does not pass the media sensor.

When using media that is 4 inches wide, position the bottom sensor all the way to the right (large blue-head open lever side).

Media Thickness Adjustment (p.53) Media Width Adjustment (p.54)

## **A** Caution

Do not install the upper sensor directly above the bottom sensor. Normal operation may not be possible.

- 7. Align the media with the left fixed media guide, align the right movable media guide with the media width, and lower the sensor arm.
- 8. Push the head close knob to lower and lock the head unit. Be sure to always push the head close knob to lock the head unit. Align it with the width of the media that has been set, then set the media width and media thickness adjustment dials. See "Chapter 3 Printer Adjustments".
- 9. Push the FEED key to feed the media. It will halt at the next print start position.

#### Cut position of media with a perforated line

When tearing manually, the media can be torn at the position of the perforated line.

When adjusting the paper stop position, set the vertical printing position to a value larger than the media stop position. Otherwise, the media may come off the platen during back feeding.

Adjust each setting using the printer driver or LabelPrinterUtility.

The following kinds and sizes of ribbons can be used.


Types	Inside wound and outside wound ribbon
Max. ribbon width	114.0 mm (4.50 inch)
Min. ribbon width	25.4 mm (1.00 inch)
Max. ribbon length	360.0 m (1,181 ft)
Max. roll diameter	74.0 mm (2.90 inch)
Inner diameter of the paper core	25.4 ± 0.25 mm (1.00 ± 0.01 inch)
Lead tape length	Less than 80.0 mm

#### **Setting method**

1. Check the kind of ribbon used and set the ribbon winding direction using menu setup mode or operation panel. This is the method for installing an outside wound ribbon (also known as "ink out").


Remember, the inked surface should be facing AWAY from the printhead surface!

2. Place the attached ribbon and paper core separately on one of the two attached ribbon holders. Insert the two ribbon holders into the ribbon and paper cores ensuring that they are pushed in all the way.

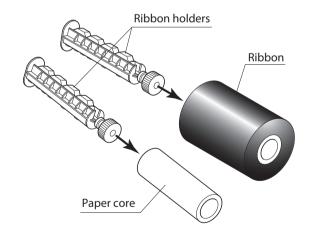


Selecting the ribbon winding direction (p.42, p46)


3. Install the unused ribbon and holder in to the rear ribbon drive unit. The splines on the ribbon drive gear mechanism engage with the end of the ribbon holder.

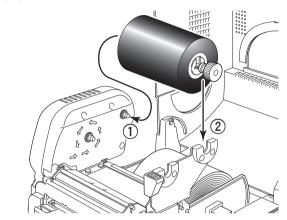


4. Push the large blue-head open lever to release the head unit. Pull out the ribbon from the bottom of the head unit to the ribbon winding side.

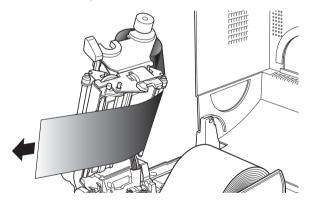


5. Using the adhesive leader of the ribbon or some adhesive tape, fix the ribbon that you have pulled out on the ribbon holder on which the paper core has been set and wind it on the ribbon holder.

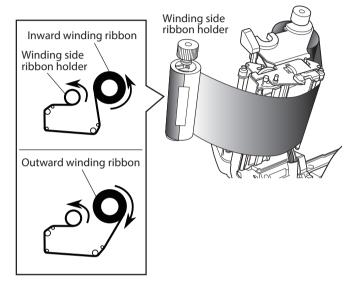

6. Set the ribbon holder on which the paper core has been set in the ribbon drive unit, then rotate it in the direction shown by the arrow to remove slack and wrinkles from the ribbon.

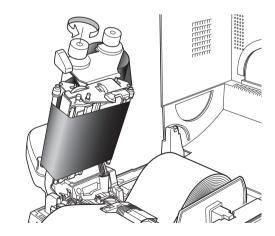

Ribbon Tension Adjustment (p.55) Ribbon Balance Adjustment (p.56) 7. Push the head close knob to lower and lock the head unit. Be sure to always push the head close knob to lock the head unit. If the ribbon is wrinkled, push the FEED key until the wrinkles disappear. If the wrinkles do not disappear or if it slips, perform ribbon balance adjustment and ribbon tension adjustment. See "Chapter 3 Printer Adjustments" for these adjustment methods.

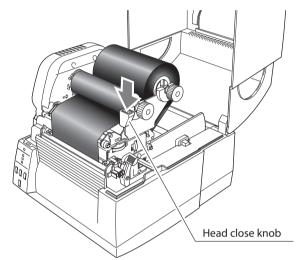

Operation Panel (p.16)

## **Mode Settings**

Turning on the power while pressing keys in the following combinations starts various functions.

Mode	Key operation
HEX dump mode	Turning power on while pushing the STOP key.
Self print mode	Turning power on while pushing the FEED key.
Menu setting mode	Turning power on while pushing the MODE/REPEAT key.

#### **HEX Dump Mode**

#### • When using label media

Turn on printer power while pushing the STOP key. If the PRINT LED has begun to flash slowly, release the STOP key, and then the printer enters HEX DUMP mode.

#### • When using continuous media

Turn on printer power while pushing the STOP key. If the PRINT LED has stopped flashing slowly and begun to flash rapidly, release the STOP key, and then the printer enters HEX dump mode.

```
DUMP LIST

02 40 30 31 30 30 0D 02 60 30 30 32 30 0D 02 4C .M0100..c0020.L

44 31 31 0D 31 30 30 30 30 30 30 30 30 30 31 30 D11.10000000010

30 30 31 30 31 32 33 34 35 36 37 38 39 3A 3B 3C 0010123456789::<
```

DUMP LIST

\* To exit HEX Dump Mode, turn off the power to the printer then turn the power on again (restart).

Setting the Media (p.23)

Media Thickness Adjustment (p.53)

Media Width Adjustment (p.54)


### **Self Print Mode**

Performing a self test print is an easy way to check on the state of printer setting and printing quality. Install the media as explained in "Installing the Media" and then operate the printer as follows.

#### Case of label media

Turn on printer power while pushing the FEED key. When the PRINT LED has begun to flash slowly, release the FEED key. After it enters TEST MODE and media has fed, two labels print then printing stops. To restart printing, press the FEED key once more.

• Case of continuous media Turn on printer power while pushing the FEED key. When the PRINT LED has stopped flashing slowly and has begun to flash rapidly, release the FEED key. After it enters TEST MODE and it prints then printing stops.

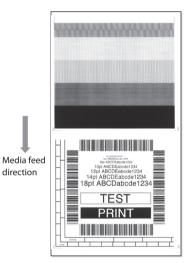

Self print pattern

To restart printing, press the FEED key once more.

#### **Media Adjustments**

Using the Self Test Print shown above, you can make adjustments to the printer settings such as media width and media thickness (printhead pressure). The location of these two adjustments is explained in Chapter 3 and also shown on the labels on the printer's mechanism.



The first sample, left, shows an incorrectly set "media thickness adjustment". For standard label media, it is recommended you set the blue dial to the "0" position.




The second sample, left, shows an incorrectly set "media width adjustment". For 4-inch or 100mm wide media, the adjuster should be set to the "9" position on the blue dial.

The settings shown above are for general label media and may not apply to specialist media.

#### **Menu Setup Mode**

If the printer power is turn on while the MODE/REPEAT key is pressed, the printer enters menu setup mode. In this mode, the printer's configuration can be changed using the VuePrint Menu System. During menu setting mode, the PRINT LED and CONDITION LED are on. Media must be installed in the printer to use the VuePrint menu system.

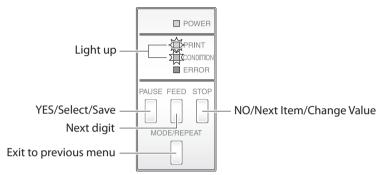

#### Functions of the keys

After each menu item is printed, the printer will also print the function of each of the buttons at that time. They vary slightly depending on the menu selected but generally fit the following guidelines:

#### PAUSE key (YES/Select/Save):

It is pushed to either select the current menu option or to save the new setting after which it advances to the next menu.

#### STOP key (NO/Next Item/Change Value):

Whilst changing a menu value (such as head temperature), pressing this key displays the next menu value available but does not save the setting.

In the "main menu", pressing this key moves to the next menu available.

#### FEED key (Next digit):

With some menu options such as head temperature, there is more than one "digit" than can be changed.

This key moves the cursor to the next digit.

#### MODE/REPEAT key (Exit to previous menu):

Exits the current menu or the VuePrint menu system.



When you are changing a menu value, pressing the "PAUSE" key (YES) causes the printer to save the currently selected parameter. The CONDITION LED flashes briefly. Do not turn off the power to the printer at this time as this may cause a malfunction.


If the power is accidentally turned off, first reset the printer to factory defaults.

### **Chapter 2 Printer Operation**

#### **Mode Settings**

### Menu Setting Flow Chart


The following is a flow chart showing the CL-S621 II/CL-S631 II VuePrint menu system.

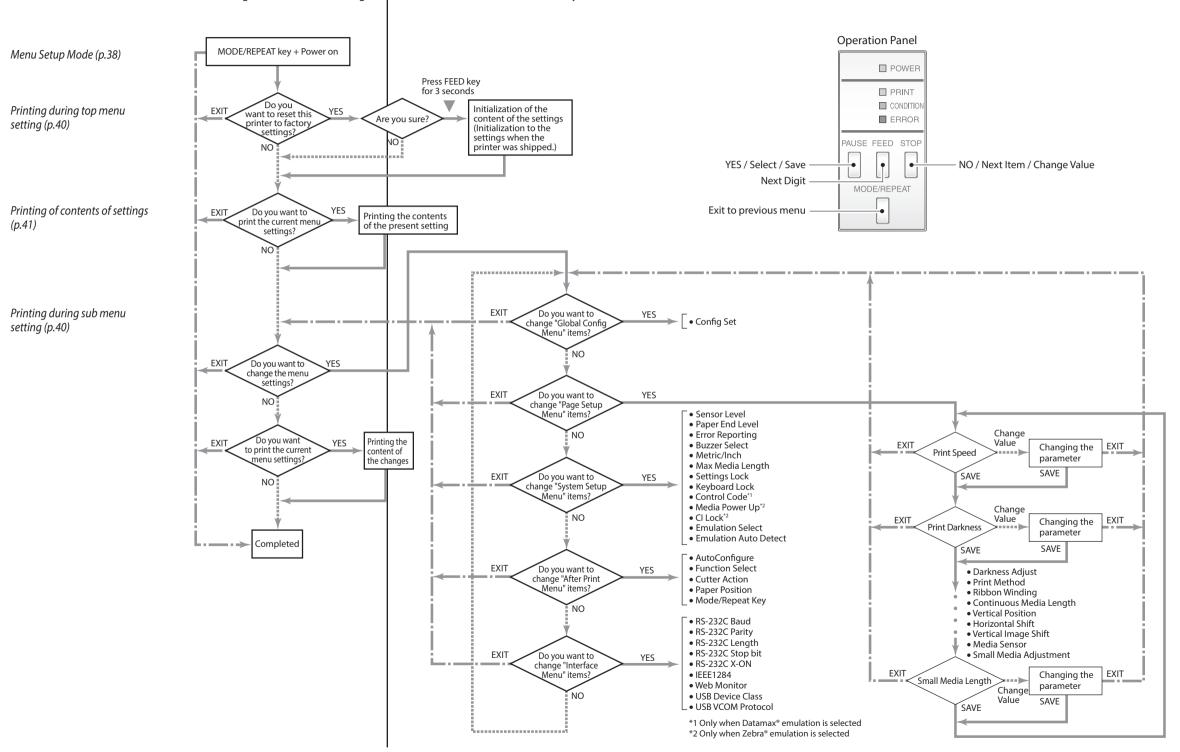

This particular example is changing the print speed and print darkness then continues through the remainder of the "Print Setup" menu. The actual output from the printer is "vertically reversed" due to the way the printer outputs the menu options. Please look at the example below to see how the output changes.


#### Menu Setting Flow Chart (p.39)

#### Printing during top menu setting

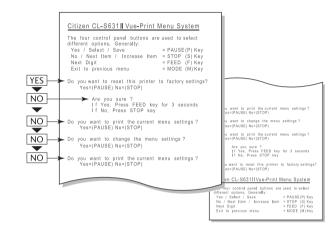

<Example of CL-S631 II Datamax<sup>®</sup> emulation selected>

#### Menu Setting Flow Chart (p.39) Printing during sub menu setting

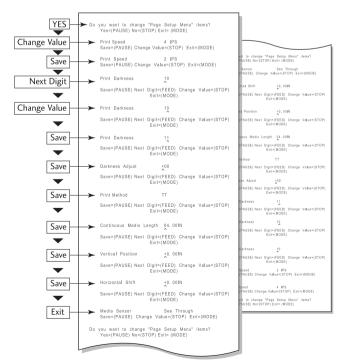

<Example of CL-S631 II Datamax® emulation selected>

Menu Setting Flow Chart (p.39)

#### Printing of contents of settings

Model Number	: CL-S631 II
ROM Version ROM Version ROM Date (DD//MM//YY) ROM Check Sum Head Check *1 Print Counter	: X.X : XXXXXXXX
ROM Date (DD//MM//YY)	· XX/XX/XX
ROM Check Sum	: XXXX
Head Check	: OK
*1 Print Counter *1 Service Counter	. 0000.072 1011
*1 Service Counter	: 0000.872 km
Cut Counter Sensor Monitor	: 83 : 2.56 V
Option Interface	: 2.56 V : None
Current Menu Sett	
	5
[Global Config Menu] Config Set	:1
-	
[Page Setup Menu] Print Speed	: 4 IPS
Print Darkness	: 10
Darkness Adjust	: 00
Print Method	: Thermal Transfe
Print Darkness Darkness Adjust Print Method Continuous Media Length Vertical Position Horizontal Shift	: 4.00 inch
Vertical Position	: 0.00 inch
Vertical Position Horizontal Shift Vertical Image Shift Media Sensor Small Media Adjustment Small Media Length 2 Symbol Set	: 0.00 inch
Media Sensor	· See Through
Small Media Adjustment	: Off
Small Media Length	: 1.00 inch
-	: PM
[System Setup Menu]	: 1.5 V
Sensor Level Paper End Level Error Reporting Buzzer Select Metric/Inch	: 1.5 V : 2.80 V
Frror Reporting	: On Printing
Buzzer Select	· On
Metric/Inch	: Inch : 10.00 inch : Off
Metric/Inch Max Media Length Settings Lock	: 10.00 inch
Settings Lock	: Off
Keyboard Lock	: Off
CONTROL CODE Emulation Select	: Off : STD : DM4
Settings Lock Keyboard Lock Control Code Emulation Select Emulation Auto Detect	: Full Auto
[After Print Menu] AutoConfigure	: On
Function Select	: Tear
AutoConfigure Function Select Cutter Action	: Backfeed
Paper Position	: 0.00 inch
Cutter Action Paper Position Mode/Repeat Key	: Disabled
[Interface Menu]	
RS-232C Baud rate	: 9600 bps
RS-232C Baud rate RS-232C Parity RS-232C Length RS-232C Stop bit RS-232C Stop bit RS-232C X-ON	: None
RS-232C Length	: 8 bit
RS-232C Stop bit	: 1 bit
KO-232C X-UN	: Yes : On
USB Device Class	: Printer
IEEE 1284 USB Device Class USB VCOM Protocol	: Auto

<Example of CL-S631 II Datamax® emulation selected>

\*1 If the double heat function is enabled, the value doubles. This function reduces print fading. To enable this function, configure the setting via Windows driver properties or LabelPrinterUtility. See the respective manual for how to configure the setting.

\*2 The settings of the Symbol Set can be changed only by a command.

**Note:** Citizen continually enhances its printers with new options and settings based on our customer's requests. Extra or changed menu items may appear on the above print out in some case.

#### **Menu Setting Table**

Global Config menu - allows you to switch between 3 complete 'config sets' contained within the printer. Page Setup Menu - allows you to change settings related to the media or print quality. System Setup Menu - allows you to change settings for the printer hardware and basic control systems. After Print Menu - changes how the printer reacts after the label has been printed. Interfaces - changes interface parameters such as baud rate.

Top Menu	Sub Menu	Default	Menu	Remarks
Global configuration	-	Config Set 1	Config Set 1 Config Set 2 Config Set 3	Sets the Config Set.
Page Setup	Print Speed	6 IPS	2 to 6 IPS	[For CL-S621 II] Printing speed setting. (5 or 6 IPS only in Direct Thermal mode.) (2 to 4 IPS with optional peeler.)
		4 IPS	2 to 4 IPS	[For CL-S631 II] Printing speed setting.
	Print Darkness	10	00 to 30	Print darkness setting (printhead temperature)
	Darkness Adjust	0	-10 to 10	Darkness command adjustment
	Print Method	Thermal transfer	Thermal transfer Direct thermal	Selecting thermal transfer (ribbon)/direct thermal media
	Ribbon Winding	Outside	Outside Inside	Selecting the ribbon winding direction.
	Continuous Media Length	4.00 inch 101.6 mm	0.25 to 99.99 inch 6.40 to 2539.7 mm	Setting default length of continuous media, if selected. (CL-S621 II) ; the lower line is in metric mode.
		4.00 inch 101.6 mm	0.25 to 64.00 inch 6.40 to 1625.6 mm	Setting default length of continuous media if selected. (CL-S631 II) ; the lower line is in metric mode.
	Vertical Position	0.00 inch 0.0 mm	-1.00 to 1.00 inch -25.4 to 25.4 mm	Print start position adjustment
	Horizontal Shift	0.00 inch 0.0 mm	-1.00 to 1.00 inch -25.4 to 25.4 mm	Horizontal printing location adjustment
	Vertical Image Shift	0.00 inch 0.0 mm	0.00 to 32.00 inch 0.0 to 812.8 mm	Adjust the off set value in vertical when mapping data on a RAM. (Datamax®)
		000 dots	-120 to 120 dots	Adjust the off set value in vertical when mapping data on a RAM. (Zebra®/Eltron®)
	Media Sensor	See Through	See Through Reflect None	Label sensor selection
	Small Media Adjustment	Off	On Off	Setting for small labels
	Small Media Length	1.00 inch 25.4 mm	0.25 to 1.00 inch 6.40 to 25.4 mm	Setting length of small label media
	Symbol Set	PM	50 symbols	Setting symbol set.
System Setup	Sensor Level	1.5 V	0.0 V to 3.3 V	Setting the threshold of the sensor
	Paper End Level	2.80 V	0.01 to 3.00 V	Sets the paper end level.
	Error Reporting	On Printing	On Printing Immediate	Setting for error report.
	Buzzer Select	On	On Off	Setting buzzer sounding conditions

#### **Menu Setting**

Top Menu	Sub Menu	Default	Menu	Remarks
	Metric/Inch	Inch	Inch mm	Setting the units used
	Max Media Length	10.00 inch 254.0 mm	1.00 to 99.99 inch 25. 4 to 2539.7 mm	Setting the maximum label length
	Settings Lock	Off	On Off	When on, prevents software commands from changing the values set by the VuePrint menu
	Keyboard Lock	Off	On Off	Prevents the control panel from affecting the printer's configuration. (User "lock-out")
	Control Code	STD	STD ALT ALT-2	Switches command mode of DMX mode. (only when Datamax <sup>®</sup> emulation is selected)
	Media Power Up	Off	On Off	Selects whether or not to initiate media measurement when the power in ON. (only when Zebra® emulation mode is selected on international models)
	CI Lock	Off	On Off	Activates/deactivates the Cl command. (only when Zebra® emulation mode is selected on international models)
	Emulation Select	DM4 (Datamax®) ZPI2 (Zebra®)	DM4 DMI DPP ZPI2 EPI2	Datamax <sup>®</sup> /Zebra <sup>®</sup> compatibility selection DM4 DataMax <sup>®</sup> 400 DMI DataMax <sup>®</sup> IClass <sup>TM</sup> DPP DataMax <sup>®</sup> Prodigy Plus <sup>®</sup> ZPI2 Zebra <sup>®</sup> ZPL2 <sup>TM</sup> EPI2 Zebra <sup>®</sup> EPL2 <sup>TM</sup>
	Emulation Auto Detect	Full Auto	On Off Full Auto	Setting emulation (as above) auto detection.
Funct	AutoConfigure	On	On Off	Optional auto configure OnAuto configure effective. If a peeler unit or auto-cutter is installed, each mode is automatically set regardless of the "function select" setting. OffAuto configure ineffective. When a peeler unit or auto-cutter is installed but has not been started, it is off and the operation is selected by "Function select".
	Function Select	Tear	Off Tear Peel On* Cut On*	Selects the type of options installed and adjusts the "paper stop" position accordingly. For example, the position where the label stops in "Tear" mode is different to that in "Peel On" mode.
	Cutter Action*	Backfeed	Backfeed Through	Cutter operating method setting Backfeed: it feeds back after each cutting operation. Through: when the number copied = n, the back end of sheet 1 to n-1 passes through, and the back end of the final page that is a single sheet is copied and fed back.
	Paper Position	0.00 inch 0.0 mm	Peel/Cut/Tear Off (Printing start position (platen-centered)) 0.00 to 2.00 inch 0.0 to 50.8 mm Peel/Cut/Tear On (Tear position/Peal On position/Cut On position) -1.00 to 1.00 inch -25.4 to 25.4 mm	Adjusts the stop position. It is based on the inch/millimeter setting. There are initial values of the stop position for each device set by "Function Select", and later, relative values are set.

\* Effective only when the optional unit is attached.

Top Menu	Sub Menu	Default	Menu	Remarks
	Mode/Repeat Key	Disabled	LabelSet LastOne Disabled	Repeat method selection LabelSet: Reprints a set of labels. This setting is ignored when Zebra® emulation mode is selected. LastOne: Issues only the final page. In count case, it issues only 1 label while continuing. Disabled: Makes the repeat key invalid.
Interface	RS-232C Baud	9600	115200 57600 38400 19200 9600 4800 2400	Sets the baud rate of the serial interface. • Interface related settings are effective after the power is turned on again.
	RS-232C Parity	None	None Odd Even	Sets the communication parity of the serial interface.
	RS-232C Length	8 bits	8 bits 7 bits	Sets the character length of the serial interface.
	RS-232C Stop bit	1 bit	1 bit 2 bits	Sets the stop bit of the serial interface.
	RS-232C X-ON	Yes	Yes No	Selects the X-ON flow control of the serial interface.
	IEEE1284	On	On Off	Enable or disables the 'enhanced' features of the IEEE1284 parallel interface.
	Web Monitor*	Auto	Auto On Off	Selecting the web monitor function.
	USB Device Class	Printer	Printer VCOM	Selects the USB device class.
	USB VCOM Protocol	Auto	Auto DTR X-ON	Selects the protocol (flow control) when operating USB VCOM.

\* Displayed only when an optional LAN board is connected to a printer.

Menu Setup Mode (p.38)

## **Quick Setup of the Print Method**

The print method (thermal transfer method/direct thermal method) can be set using operation panel in addition to menu setting mode.



Be sure to always shut off the operation of print before changing a setting. You cannot change a setting during printing (including pause).

### **Setting method**


Each time you push the PAUSE key while pushing the MODE/REPEAT key, a buzzer sounds and the printer switches between thermal transfer method and direct thermal method.



If thermal transfer method has been selected, the buzzer sounds once and the CONDITION LED flashes.

If direct thermal method has been selected, the buzzer sounds twice and the CONDITION LED flashes.

The change is complete when the CONDITION LED goes out. Changes will remain in effect even after the power is turned off.

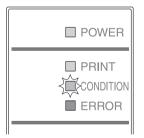

## **Selecting the Ribbon Winding Direction**

Besides the Menu Setup Mode, you can also select the ribbon winding direction (outside-wound / inside-wound) by using the keys on the Operation Panel.

Outside-wound and inside-wound will switch from one to another each time you press the PAUSE key for 4 seconds or more while pressing the MODE/REPEAT key when not printing.

- If the outside-wound (also known as "ink out") gets selected, the buzzer will sound 3 times, and CONDITION LED will flash.
- If the inside-wound (also known as "ink in") gets selected, the buzzer will sound 4 times, and CONDITION LED will flash.

When the lights go out on the CONDITION LED, selection is finalized. Changes will remain in effect even after the power is turned off.

Note: The winding direction cannot be changed when printing.

## **Emulation Auto Detect: Cross-Emulation™**

If a control language different from the emulation when operating with the Emulation Auto Detect setting in System Setup set to "On" or "Full Auto" is received, the emulation is automatically switched. Note that the Eltron language will not be detected.

#### • If the "Emulation Auto Detect" is set to "On"

If the "Emulation Auto-Detect" is set to "On", this will cause the CONDITION LED to flash when it detects an alternative control language. By selecting MODE/REPEAT KEY, the printer will restart and emulation will automatically make a switch. By selecting another KEY, detection will be canceled, and CONDITION LED will turn Off.

If the "Emulation Auto Detect" is set to "Full Auto" When a different control language is detected, the printer automatically restarts and the emulation switches. This setting is for use when the printer is installed in a location some distance away and the operation panel cannot be reached.

Menu Setting Table (p.42)

Menu Setting Table (p.42)

## **Manually Selecting the Printer Emulation**

To manually choose between Datamax<sup>®</sup>, Zebra<sup>®</sup> and Eltron<sup>®</sup> emulations, you can use the VuePrint menu system. The Emulation Select option in the System Setup menu allows you to do this.

Alternatively, you can use the "Quick Switch" option as follows:

 Turn on the printer holding down PAUSE and FEED keys together.
 After the printer beeps three times and the CONDITION LED

flashes, release the PAUSE and FEED keys.

- 2. Press FEED key once for Datamax<sup>®</sup> emulation.
- 3. Press FEED key two times for Zebra® emulation.
- 4. Press FEED key three times for Eltron<sup>®</sup> emulation. The printer beeps each time the feed key is pressed.
- 5. To save the new selection, press MODE/REPEAT key. The printer will beep four times and then restarts.


# **Chapter 3 Printer Adjustments**

## **Sensor Adjustments**

The sensing level of the label detection sensor (transparent sensor), black mark detection sensor (reflective sensor), and continuous media detection sensor (reflective sensor) are adjusted separately and independently. Firstly, the sensor type must be selected either using the VuePrint menu system or the Sensor Method Selection shown below. Then the adjustment and calibration of the sensor can be made.

### **Entering Sensor Adjustment Mode**

1. Turn on the power while pushing the PAUSE key, FEED key, and STOP key simultaneously.



**Power Switch** 

2. After the PRINT LED and CONDITION LED light up, release the keys to change the printer to sensor adjustment setting mode.



### **Quick Sensor Selection Method**

To select the sensor, ensure the CONDITION LED is lit, then push the STOP key while pushing the MODE/REPEAT key.


Each time the key is pushed, the buzzer sounds and the selected sensor alternates between the label detection sensor (transparent sensor) and black mark detection sensor (reflective sensor).

If the keys are pushed for at least 4 seconds, the selected sensor switches to the continuous media detection sensor (reflective sensor).

When the label detection sensor (transparent sensor) is selected, the buzzer sounds once and the PRINT LED lights up.

When the black mark detection sensor (reflective sensor) is selected, the buzzer sounds twice and the PRINT LED flashes.

When the continuous media detection sensor (reflective sensor) is selected, the buzzer sounds thrice and the PRINT LED goes off.



STOP MODE/REPEAT




Loading roll media (p.24)

Loading roll media (p.24)

# Adjusting the label detection sensor (Transparent sensor)


- 1. Push the large blue-head open lever to release the head unit and sensor arm, then return only the sensor arm back to its original position. Use the movable media guide to align the positions of the upper sensor marker and the bottom sensor marker (white).
- 2. After aligning the markers, use an item with a fine tip, such as a pen, to slide and lock the upper sensor lock (blue).

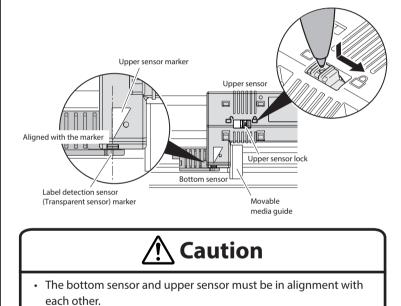

• Attempting to move the sensor while still locked may damage it.

Quick Sensor Selection Method (p.48)


- 3. Select the label detection sensor (Transparent sensor), and open the sensor arm.
- 4. Install only the liner media (label backing paper) with the label media removed so that it will pass between the platen roller and the media sensor. (Be careful that media with black marks does not pass the media sensor.) Then close the sensor arm and the printhead.

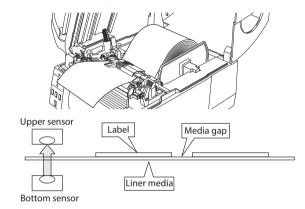

- 5. If the PAUSE key is pressed and released while the MODE/ REPEAT key is pressed, the PRINT LED goes off, after the CONDITION LED switches from lit to flashing, media feeding starts, and the sensor is automatically adjusted.
- 6. If automatic adjustment stops normally, the PRINT LED and CONDITION LED return to their original status. If it stops abnormally (adjustment impossible), the CONDITION LED and ERROR LED flash.
- 7. To save the setting, push the STOP key. The buzzer sounds once and the printer restarts.

# Adjusting the black mark detection sensor (Reflective sensor)

1. Open the printhead and the sensor arm, then align the position of the sensor marker of the bottom sensor is at the center of the black mark on the media.

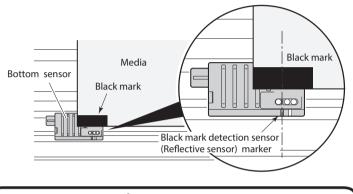


## 🕂 Caution

Do not install the upper sensor directly above the bottom sensor. Normal operation may not be possible.

2. Select the black mark detection sensor (Reflective sensor).

3. With the black mark detection sensor (Reflective sensor) selected, install the label media so that it is between the platen roller and the media sensor. (Be careful that black mark and media gap do not pass the media sensor.) Then close the sensor arm and the printhead.

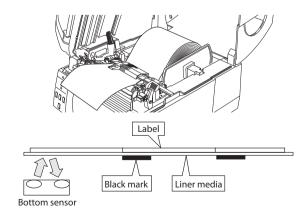

Quick Sensor Selection Method (p.48)

- 4. If the PAUSE key is pressed and released while the MODE/ REPEAT key is pressed, the PRINT LED goes off, after the CONDITION LED switches from lit to flashing, media feeding starts, and the sensor is automatically adjusted.
- 5. If automatic adjustment stops normally, the PRINT LED and CONDITION LED return to their original status. If it does not stop normally (adjustment impossible), the CONDITION LED and ERROR LED flash.
- 6. To save the setting, push the STOP key. The buzzer sounds once and the printer restarts.

# Adjusting the continuous media detection sensor (reflective sensor)

1. Push the head open lever to release the head unit and sensor arm. Move the bottom sensor close to the center of the width of the media.

## **A** Caution

Do not install the upper sensor directly above the bottom sensor. Normal operation may not be possible.

- 2. Select the continuous media detection sensor (reflective sensor), and open the sensor arm.
- 3. Install the label media so that it is between the platen roller and the media sensor.(Be careful that media with black marks does not pass the media sensor.) Then close the sensor arm and the printhead.
- 4. If the PAUSE key is pressed and released while the MODE/ REPEAT key is pressed, after the CONDITION LED switches from lit to flashing, media feeding starts, and the sensor is automatically adjusted.
- 5. If automatic adjustment stops normally, the CONDITION LED return to its original status. If it stops abnormally (adjustment impossible), the CONDITION LED and ERROR LED flash.
- 6. To save the setting, push the STOP key. The buzzer sounds once and the printer restarts.

Quick Sensor Selection Method (p.48)

Loading roll media (p.24)

Self Print Mode (p.37)

## **Media Thickness Adjustment**

It may be necessary to adjust the printer according to the thickness of the media being used. This can be done easily by rotating the media adjustment dial to improve the print quality.


- Poor print quality across the complete printout means wrongly set media thickness. See this section.
- Poor print quality on one side of a printout means wrongly set media width. See next section.

## When using standard label media, high quality media or direct thermal media

Adjust while performing test printing by turning the dial from the smallest number on the dial to the largest number on the dial one step at a time.

#### When using thicker media (tags, card, etc.)

Adjust while performing test printing by turning the dial from the smallest number on the dial to the largest number on the dial one step at a time.

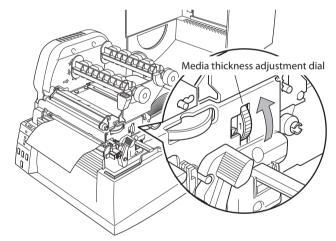

Media Thickness Dial Position	Suggested media type	
0	Direct thermal media (thin media)	
1-2	Standard Label media, Direct thermal media	
3-5	Thicker backing paper labels	
6-9	Cards, tags, thicker media stock.	

These values are guidelines. The exact media being used must be matched with the correct media thickness adjustment position.

- When shipped from the factory, it is set at dial 1 or 2.
- (The factory default setting is indicated on the adjustment guage label.)
- The offset adjustment varies according to the thickness and the hardness of the media.

Loading roll media (p.24)

Self Print Mode (p.37)


## **Media Width Adjustment**

The head pressure varies according to the width of the media being printed. The head pressure balance must be adjusted according to media width so that constant head pressure is applied to the head. With this printer, it can be adjusted easily by turning the media width adjustment dial. If the printing is blurred or lightly printed on one side or the media moves in a zigzag pattern adjust the head pressure balance.

After making an adjustment, confirm the output quality with a test print.

## **A** Caution

When using narrow media, be sure to MAKE this adjustment. (If you do not, the head may be damaged by jamming, etc.)

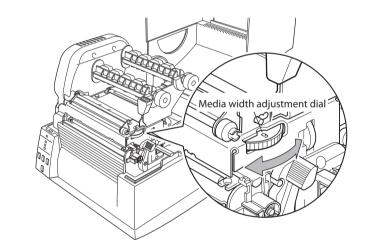


Dial position	Media width mm (inches)	Head pressure
0	19.5 to 23.0 mm (0.77 to 0.90)	
1	23.0 to 30.0 mm (0.90 to 1.18)	Low
2	30.0 to 39.0 mm (1.18 to 1.53)	T I
3	39.0 to 49.0 mm (1.53 to 1.92)	
4	49.0 to 62.0 mm (1.92 to 2.44)	
5	62.0 to 76.0 mm (2.44 to 2.99)	
6	76.0 to 88.0 mm (2.99 to 3.46)	
7	88.0 to 99.0 mm (3.46 to 3.89)	
8	99.0 to 108 mm (3.89 to 4.25)	High
9	108 to 118 mm (4.25 to 4.65) (setting when shipped)	

The following values are criteria.

Setting the Ribbon (p.32)


## **Adjusting the Ribbon**

When using narrow-width ribbons or very specialist thermal ribbon material, it may be necessary to adjust the ribbon tension and ribbon balance adjustments to avoid ribbon wrinkle or slippage.

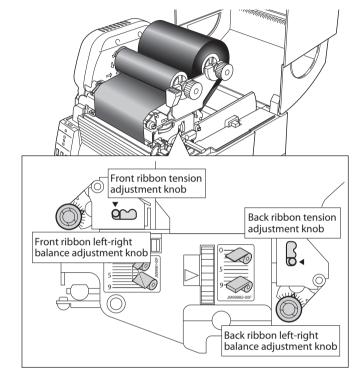

### **Ribbon Tension Adjustment**

The ribbon tension has three adjustment positions on both the feeding side (back side) and winding side (front side).



#### Adjustment criteria

Ribbon width of 4 inches: strong Ribbon width of 3 inches: medium Ribbon width of 2 inches: weak

Self Print Mode (p.37)

First make a test print and then adjust the printer as required:

- Slippage of the ribbon causes a dirty film to be seen on the media. Reduce the tension adjusters
- Ribbon wrinkle (diagonal lines across printout): Increase the ribbon tension.

After making any adjustments, print another test print or two to make sure the ribbon is feeding correctly.

#### **Adjusting the Ribbon**


Self Print Mode (p.37)

### **Ribbon Balance Adjustment**

Do this adjustment by turning the front and back balance adjustment knobs. If the ribbon is wrinkled, adjust it as follows. The scale is usually aligned with the center.

#### **Adjustment procedure**

1. Check between the supply side ribbon and the back balance adjustment knob to find out on which side the ribbon is loose.

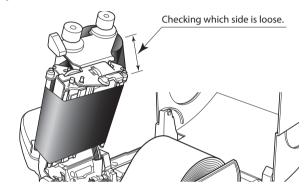

- Case of looseness on the side opposite the adjustment knob
- 2. Turn the front adjustment knob to the right to remove the looseness, then make a test print to ensure that the ribbon is not wrinkled.

If it is wrinkled, turn the back adjustment knob to the right and do the test printing again and check to make sure that the ribbon is not wrinkled.





Front balance adjustment knob

Back balance adjustment knob

#### Case of looseness on the adjustment knob side

3. Turn the front adjustment knob to the left to remove the looseness, then make a test print to ensure that the ribbon is not wrinkled.

If it is wrinkled, turn the back adjustment knob to the left and do the test printing again and check to make sure that the ribbon is not wrinkled.






Front balance adjustment knob

Back balance adjustment knob

## Cleaning

Wipe off any foreign matter such as media dust, dirt and adhesive substances built up around the printhead with the head cleaning pen (head cleaner) provided, and use a soft cloth soaked in ethyl alcohol for the platen etc. It is particularly important to clean the thermal printhead after printing on thermal media for long periods, which will guarantee the print quality and extend the life of the thermal printhead.

**Note:** Always use the head cleaner when cleaning the thermal printhead.

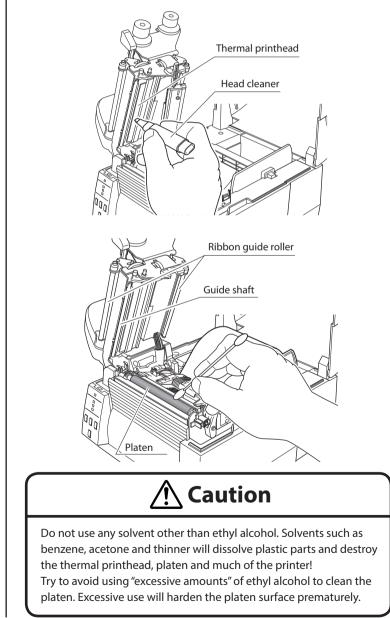

## Troubleshooting

This section explains corrective actions taken when the printer malfunctions or when an error message is displayed.

#### Items to check when a malfunction occurs

When the printer malfunctions during operation, take corrective action with reference to the following table. If the corrective action does not solve the problem, consult with the service personnel at the dealer where you purchased the printer.

Indication	Check	Corrective action
The LED do not light up when printer power is connected.	<ol> <li>Is the plug of the power cord correctly inserted into the electric outlet?</li> </ol>	<ol> <li>Insert the plug of the power cord correctly in the electric outlet.</li> </ol>
	2) Is the connector of the power cord correctly inserted into the power inlet of the printer?	<ol> <li>Insert the connector of the power cord correctly into the power inlet of the printer.</li> </ol>
	3) Is the power cord damaged?	<ol> <li>Replace the power cord. Consult with the dealer where the printer was purchased to make sure you obtain a cord made especially for the printer</li> <li>Note: Do not use any power cord except one made especially for the printer.</li> </ol>
	4) Is power supplied to the electric outlet the printer is connected to?	<ol> <li>Check to make sure power is supplied to the outlet. If there are any problems, make sure power is supplied to the building. Or find out if a power failure has occurred.</li> </ol>
	5) Is the main fuse in the building's fuse box burnt out?	<ol> <li>If necessary, replace the main fuse in the building's fuse box, and reset the main breaker. Ask a qualified serviceman to carry out the replacement.</li> </ol>
Paper is feeding, but nothing is printed.	<ol> <li>Is the thermal printhead dirty?</li> <li>Is a label stuck to the head?</li> </ol>	<ol> <li>If it is dirty, remove the dirt with the attached head cleaner If a label is stuck to the therma printhead remove it.</li> <li>Note: Do not use a metal object to remove a label stuck to the inside of the printer. (This may damage the thermal printhead.) If adhesive</li> </ol>
	2) Is the recommended	label material is stuck to the thermal printhead, remove it with a soft cloth soaked in ethyl alcohol 2) Use the recommended ribbon
	ribbon or a ribbon of the same type used?	or a ribbon of the same type.

Connection to Power (p.18)

Cleaning (p.58)

Setting the Ribbon (p.32)

### Troubleshooting

	Indication	Check	Corrective action
Loading roll media (p.24) Setting method (p.32)	The printer is not printing	<ol> <li>Are the media and the ribbon correctly set?</li> </ol>	<ol> <li>Correctly set the media and the ribbon.</li> </ol>
Menu Setting Table (p.43)	neatly.	2) Is the printing density too high or too low?	2) Set the appropriate printing density using the menu or control software.
Cleaning (p.58)		<ol> <li>Is the platen dirty? Is it deformed?</li> </ol>	<ol> <li>If it is dirty, clean it with ethyl alcohol. If it is deformed, replace it.</li> </ol>
			<b>Note:</b> Consult with the dealer that supplied the printer concerning the replacement.
		<ol> <li>Is the thermal printhead dirty?</li> <li>Is a label stuck to the head.</li> </ol>	<ol> <li>If it is dirty, remove the dirt with the attached head cleaner. If a label is stuck to the head, remove it.</li> </ol>
			Note: Do not use a metal object to remove a label stuck to the inside of the printer. (This may damage the thermal printhead.) If adhesive label material is stuck to the print head, remove it with a soft cloth soaked in ethyl alcohol.
Setting the Ribbon (p.32)		5) Is the recommended ribbon or a ribbon of the same type used?	5) Use the recommended ribbon or a ribbon of the same type.
Media Thickness Adjustment (p.54)		6) Is the thermal printhead in the correct position for the media that is used?	6) Adjust the offset of the thermal printhead with the media thickness adjustment dial.
Media Width Adjustment (p.55)		<ol> <li>Is the printer's head pressure balance correct for the width of the media that is used?</li> </ol>	<ol> <li>Adjust the thermal printhead pressure with the media width adjustment dial.</li> </ol>
Loading roll media (p.24) Setting method (p.32)	The printing position	<ol> <li>Are the media and the ribbon correctly set?</li> </ol>	<ol> <li>Correctly set the media and the ribbon.</li> </ol>
Cleaning (p.58)	changes.	2) Is the platen dirty? Is it deformed?	<ul> <li>2) If it is dirty, clean it with ethyl alcohol. If it is deformed, replace it.</li> <li>Note: Consult with the dealer that supplied the printer concerning the replacement.</li> </ul>
LED Functions (p.22)		<ol> <li>Are the data contents and the command signals from the host appropriate?</li> </ol>	<ol> <li>If an error message is displayed, check the content of the software and the communication status set by the host computer.</li> </ol>
Menu Setting Table (p.43)		4) Are the menu values set appropriately?	4) Set the correct menu values using the operating panel or the host computer.

#### Troubleshooting

	Indication	Check	Corrective action
	The printing position changes.	5) Are the sensitivities of the media sensors appropriate for the media that is used?	<ol> <li>Set the media sensitivity to appropriate values.</li> <li>If this does not solve the problem, change the "Sensor level" that is set in the "System setup."</li> </ol>
Ribbon Tension Adjustment (p.56)	The ribbon is wrinkled	<ol> <li>Is the ribbon tension suitable for the ribbon that is used?</li> </ol>	<ol> <li>Adjust the tension with the ribbon tension adjustment knob.</li> </ol>
Ribbon Balance Adjustment (p.57)		<ol> <li>Is the ribbon used correctly balanced to the right and left?</li> </ol>	<ol> <li>Adjust the left - right balance with the ribbon balance adjustment knob.</li> </ol>
		<ol> <li>Is the printing density too high?</li> </ol>	<ol> <li>Set the appropriate printing density using the menu or control software.</li> </ol>
		<ol> <li>Are the media and ribbon the recommended products or equivalent products?</li> </ol>	<ol> <li>Use the recommended products or equivalent products. If this does not correct the problem, contact a service representative.</li> </ol>
Ribbon Tension Adjustment (p.56)	The ribbon slips (ribbon dirt is produced.)	<ol> <li>Is the ribbon tension suitable for the ribbon that is used?</li> </ol>	<ol> <li>Adjust the tension with the ribbon tension adjustment knob.</li> </ol>
Setting the Ribbon (p.32)	The ribbon does not wind.	<ol> <li>Is the ribbon set in the correct course?</li> </ol>	<ol> <li>Set the ribbon in the correct course.</li> </ol>
		2) Is the ribbon winding direction reversed?	<ol> <li>Set the correct winding direction.</li> </ol>

## Specifications

ltem		Description		
Printing	Printing method	Thermal transfer/Direct thermal		
	Resolution	Main scanning line density: 203 dots/inch (8 dots/mm) (CL-S 300 dots/inch (11.8 dots/mm) (CL		
			lots/inch (8 dots/mm) (CL-S621 II) ots/inch (11.8 dots/mm) (CL-S631 II	
		Head 864 dots (printable dots: 832 dots) (CL-S621 II) Head 1275 dots (printable dots: 1240 dots) (CL-S631 II)		
	Max. print width	104 mm 105 mm	4.1 inch (CL-S621 II) 4.1 inch (CL-S631 II)	
	Max. print length	2539.7 mm 1625.6 mm	99.99 inch (CL-S621 II) 64.00 inch (CL-S631 II)	
	Print density	Print density is adjustable with sc	oftware	
Printing speed	Printing speed setting	[For CL-S621 II] 6, 5, 4, 3 or 2 inches per second (Direct thermal) 4, 3 or 2 inches per second (Thermal transfer) 4, 3 or 2 inches per second when the optional peeler is used. [For CL-S631 II] 4, 3 or 2 inches per second		
Print mode	Batch mode	Normal printing (single or multiple sheets)		
	Tear off mode	Feeds back media to the tear-off position after printing is completed		
	Cut mode <sup>*1</sup>	<ul> <li>Prints while cutting at designated sheet units.</li> <li>The following two kinds of cut mode operations are done.</li> <li>Backfeed</li> <li>Cut through (Cut through refers to stopping present printing to cut the previous label when it reaches the cut position. After cutting, printing restarts but a gap may be created at the seam of the printing at this time.)</li> </ul>		
	Peel mode <sup>*1</sup>	Peels labels from the liners after printing them.		
Media	Types of media	Roll, fanfold (continuous media, die-cuts, continuous tags. paper or tickets)		
	Recommended media	Thermal transfer: label media (LR1111 LINTEC) Direct thermal media: label media (150LA-1 Ricoh), tag media (130LHB Ricoh)		
	Max. media width	118.0 mm	4.65 inch	
	Min. media width	19.5 mm	0.77 inch	
	Min. label width	19.5 mm	0.77 inch	
	Min. label pitch <sup>*2</sup>	6.35 mm	0.25 inch	
	Max. media thickness	0.254 mm	0.01 inch	
	Max. media length	2539.7 mm	99.99 inch (CL-S621 II)	
		1625.6 mm	64.00 inch (CL-S631 II)	
	Min. media length	6.35 mm	0.25 inch	
	Min. media thickness	0.0635 mm	0.0025 inch	
	On-board roll media	Max. external diameter: 127 mm	5 inch	
	diameter	Media core: 25.4 to 76 mm 1 to 3 inch		

### Specifications

Item		Description	
Ribbon	Recommended ribbon	B110A Ricoh	
	Max. ribbon width	114.0 mm	4.50 inch
	Min. ribbon width	25.4 mm	1.00 inch
	Max. ribbon length	360.0 m	1,181 ft
	Max. roll diameter	74.0 mm	2.90 inch
	Inner diameter of the paper core	$25.4\pm0.25~\text{mm}$	1.00 ± 0.01 inch
	Ribbon end tape length	Max. 80.0 mm	3.15 inch
	Ribbon end detection	Ribbon out detection by a tensio	n sensor
Bar code (for Datamax <sup>e*3</sup> emulation)	One-dimension	Code 3 of 9 · UPC-A · UPC-E · EA     Interleaved 2 of 5 · Code 128 · H     Codabar (NW-7) · Int 2 of 5 (Moo     Plessey · Case Code · UPC 2DIG     Telepen · ZIP · UCC/EAN128 · UC     UCC/EAN128 Random Weight ·	HBC (Modulus 43-used code 3 of 9) Julus10-used Interleaved 2 of 5) ADD • UPC 5DIG ADD • Code 93 CC/EAN128 (for K-MART)
	Two-dimension	<ul> <li>MaxiCode<sup>*4</sup> • PDF-417 • Data Matrix • QR Code<sup>*5</sup> • Aztec</li> <li>GS1 Databar Omnidirectional (RSS-14)</li> <li>GS1 Databar Truncated (RSS-14 Truncated)</li> <li>GS1 Databar Stacked (RSS-14 Stacked)</li> <li>GS1 Databar Stacked Omnidirectional (RSS-14 Stacked Omnidirectional)</li> <li>GS1 Databar Limited (RSS Limited)</li> <li>GS1 Databar Expanded (RSS Expanded)</li> </ul>	
Bar code (for Zebra® <sup>*6</sup> emulation)	One-dimension	<ul> <li>Code 11 • Interleaved 2 of 5 • Code 39 • EAN-8 • UPC-E • Code 93</li> <li>Code 128 • EAN-13 • Industrial 2 of 5 • Standard 2 of 5</li> <li>• ANSI CODABAR • LOGMARS • MSI • Plessey • UPC/EAN Extensions</li> <li>• UPC-A • POSTNET • Planet</li> </ul>	
Two-dimension• Code49 • PDF-417 • CODABLOCK • Maxio • Micro PDF-417 • Data Matrix • QR Code** • GS1 Databar Omnidirectional (RSS-14) • GS1 Databar Truncated (RSS-14 Truncate • GS1 Databar Stacked (RSS-14 Stacked) • GS1 Databar Stacked Omnidirectional (RSS-14 Stacked Omnidirectional) • GS1 Databar Limited (RSS Limited) • GS1 Databar Expanded (RSS Expanded)		R Code <sup>*5</sup> • TLC39• Aztec ISS-14) Truncated) acked) :tional I) ed)	
Bar code (for Eltron <sup>®*6</sup> emulation)	One-dimension	<ul> <li>Code39 • Code93 • Code128 • Codabar • EAN-8 • EAN-13</li> <li>German Postal Code • Interleaved2of5 • POSTNET • Planet</li> <li>Japanese Postnet • UCC/EAN-128 • UPC-A • UPC-E</li> <li>• UPC-Interleaved2of5 • Plessey(MSI-1) • MSI-3</li> </ul>	
	Two-dimension	<ul> <li>Aztec • Data Matrix • MaxiCode<sup>*</sup></li> <li>GS1 Databar Omnidirectional (R</li> <li>GS1 Databar Limited (RSS Limite</li> <li>GS1 Databar Stacked (RSS-14 St</li> <li>GS1 Databar Truncated (RSS-14</li> </ul>	ISS-14) ed) acked)

### Specifications

ltem	Description
Font (for Datamax <sup>®*3</sup> emulation)	<ol> <li>Seven kinds of fixed pitch font         <ul> <li>Overseas, English fonts and European fonts</li> </ul> </li> <li>OCR fonts         <ul> <li>OCR-A, OCR-B<sup>*7</sup></li> </ul> </li> <li>Proportional fonts             CG Triumvirate smooth font             CG Triumvirate Bold smooth font             203dpi (6, 8, 10, 12, 14, 18, 24, 30, 36, 48 points: CL-S621 II)             300dpi (4, 5, 6, 8, 10, 12, 14, 18, 24, 30, 36, 48 points: CL-S631 II)             <ul> <li>Character set: Conforms with code page 850 standards</li> <li>True type<sup>™</sup> rasterizer<sup>*8</sup></li> </ul> </li> </ol>
Font (for Zebra <sup>∞*6</sup> emulation)	<ol> <li>Five kinds of fixed pitch font         <ul> <li>Overseas, English fonts and European fonts</li> <li>OCR fonts                 OCR-A, OCR-B<sup>*7</sup></li> <li>Proportional font                 CG Triumvirate Condensed Bold</li> <li>True type<sup>™</sup> rasterizer<sup>*8</sup></li> </ul> </li> </ol>
Font (for Eltron® <sup>*6</sup> emulation)	<ol> <li>Five kinds of fixed pitch font         <ul> <li>Overseas, English fonts and European fonts</li> <li>Two kinds of fixed pitch font             <ul> <li>Numbers only</li> </ul> </li> </ul> </li> </ol>
Symbol set <sup>*9</sup> Single-Byte sets (Datamax <sup>®*3</sup> , Zebra <sup>®*6</sup> Emulation)	PC866U Ukrainian <sup>*10</sup> , PC Cyrillic, ISO 60 Danish/Norwegian Desk Top, ISO 8859/1 Latin 1, ISO 8859/2 Latin 2 ISO 8859/9 Latin 5, ISO 8859/10 Latin 6, ISO 8859/7 Latin/Greek ISO 8859/15 Latin 9, ISO 8859/5 Latin/Cyrillic, ISO 69: French ISO 21: German, ISO 15: Italian, Legal, Math-8, Macintosh Math, PC-858 Multilingual, Microsoft Publishing, PC-8 PC-437 USA, PC-8 D/N, PC-437N, PC-852 Latin/Greek PC-862 Latin/Hebrew, Pi Font, PC-850 Multilingual, PC-864 Latin/Arabic, PC-8 TK, PC-437T, PC-1004, PC-775 Baltic Non-UGL, Generic Pi Font, Roman-8, Roman-9, ISO 17: Spanish ISO 11: Swedish, Symbol, PS Text, ISO 4: United Kingdom ISO 6: ASCII, Ventura International, Ventura Math Ventura US Windows 3.1 Latin 1, Wingdings, Windows 3.1 Latin 2 Windows 1.1 Baltic (Latv, Lith), Windows 3.0 Latin 1 Windows Latin/Cyrillic, Windows 3.1 Latin 5
Symbol set <sup>*9</sup> Double-byte sets (Datamax <sup>®<sup>3</sup></sup> Emulation)	EUC, JIS, Shift JIS, Unicode, KS Code, GB Code

### Specifications

Item		Description	
Control language		Supports the Datamax <sup>®*3</sup> language, Zebra <sup>®*6</sup> language and Eltron <sup>®*6</sup> language	
Outline of electronic	CPU	32Bit RISC CPU	
devices	ROM	Standard equipment: FLASH ROM 16MBbytes (User area: 4MBytes)	
	RAM	Standard equipment: SDRAM 32MBytes (User area: 16MBytes)	
Media detection	Transparent sensor	Detects media gap between labels, notches on tags, and media	
sensors	Reflective sensor	Detects reflective mark on back of media and media out	
	Label peeling sensor <sup>*1</sup>		
Communication	Serial	2400 4800 9600 19200 38400 57600 115200 bps	
interfaces	USB	FULL Speed USB2.0	
Communication	Parallel	IEEE1284 (compatible, Nibble, ECP mode)	
interface options	Network	Wired ethernet (10-BASE-T/100-BASE-TX) or wireless LAN	
Indications and	LED	POWER, PRINT, CONDITION, ERROR	
switches	Buzzer	Alarms, errors, etc.	
	Operating panel keys	PAUSE, FEED, STOP, MODE/REPEAT	
	Head-up detection sensor	Detects head open	
	Power switch	Turns power on and off	
	Accoustic noise	55 dB (by EN ISO7779)	
Power (standards)	100 V version	100 V, 50/60 Hz (Japan)	
		120 V (-10%+6%), 2.5 A, 60 Hz (U.S.A., Canada) UL60950-1, CSA No. 950, FCC Part 15 Subpart B (Class A)	
	220 V version	220 V-240 V (-10%+6%), 1.5 A, 50/60 Hz (Europe) EN60950-1, EN 55022 (Class A), EN55024, EN61000-3-2, EN61000-3-3	
Environment	Operating temperature conditions:	Operating temp. 0 to 40°C, humidity 30 to 80%, condensation free (Conditions: ventilation, and natural convection)	
		Conditions assuring operation and printing	
	Storage temperature conditions:	Temp. –20 to 60 °C, humidity 5 to 85 % (Conditions: ventilation, and natural convection) *However, for storage at high temperature and humid environments, the combination of 40°C and 85% RH (no condensation) is taken as the worst value.	

н

#### Specifications

Item	Description	
External dimensions <sup>*11</sup>	Approx. 231(W) × 289 (D) × 263 (H) mm 9.1(W) × 11.4 (D) × 10.3 (H) inch	
	Unit: mm (inch)	
	Approx. 231 (9.1)	
Weight	Approx. 4.9 kg (10.8 lb.)	
Accessories	Test label media, Test ribbon, Quick start guide <sup>*12</sup> , Head cleaner, Power cord, Media holder bar and Media holder guide, Ribbon holder, Paper core	
Option	Auto-cutter unit, Peeler unit, IEEE1284 Parallel interface board, Ethernet interface board and wireless LAN interface board.	

\*1: Options can be separately purchased.

\*2: When a media pitch of less than 1 inch is used, activate the "Small Media Adjustment" setting in the "Page Setup."

\*3: Datamax<sup>®</sup> is a registered trademark of Honeywell International Inc.

\*4: Maxi Code is a registered trademark of UPS.

\*5: QR Code is a registered trademark of DENSO WAVE INCORPORATED.

\*6: Zebra®, Eltron®, ZPL2™, and EPL2™ are registered trademarks of ZIH Corp., USA

\*7: Depending on the reader, OCR font recognition may be poor.

\*8: UFST<sup>™</sup> and TrueType<sup>™</sup> rasterizer are licensed from Monotype Imaging, Inc.

TrueType™ is a trademark of Apple Inc.

\*9: Use it when drawing a TrueType font. Eltron® Emulation does not support a TrueType font.

\*10: "PC866U Ukraina" is supported only in Datamax® emulation.

\*11: Dimensions are design values. Actual dimensions may vary due to variance in manufacturing processes.

\*12: You can download the driver, SDK, utility and BarTender (label creation software) from the URL listed in the Quick Start Guide. BarTender is a registered trademark of SEAGULL SCIENTIFIC, INC.

This printer is connected to a computer and prints according to commands sent from the computer.

There are three types of computer interfaces, and these are connected to devices suited to each type of interface. The printer can also be connected to a computer by the optional Ethernet.

### **Serial Interface**

#### **Specifications**

System	Start/stop asynchronous duplex communication
Signal level	RS-232C
Baud rate	2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
Bit length	7 Bit, 8 Bit
Stop bit	1 Bit, 2 Bit
Parity	Odd, even, none
Connector	D-SUB 25 PIN

#### Signal line and pin arrangement

Pin No.	Signal code	Signal name	Function
1	FG	Protective grounding	Protective grounding
2	TXD	Transmitted data	Signal line that transmits data from the printer to other devices
3	RXD	Received data	Signal line that transmits data from other devices to the printer
4	RTS	Transmission request	Pull up to +5.4 V through 3.3 k $\Omega$
5	NC	-	Not used
6	DSR	Data set relay	Signal line that is active when an external device can interface with the printer
7	SGND	Signal line ground	Shows the ground level of the signal line
8-13	NC	-	Not used
14	VCC	+5V	(FACTORY USE ONLY)
15-19	NC	-	Not used
20	DTR	Data terminal relay	Signal line that is active when an external device can interface with the printer
21-25	NC	-	Not used


#### **XON/XOFF Protocol**

#### **Requirements to output X-ON code**

- Communication is possible when the power is on.
- When the receive buffer has less than 128 bytes available, XOFF code is output, then the receive buffer has at least 1024 bytes available.

#### **Requirements to output the X-OFF code**

• When the receive buffer has less than 128 bytes available

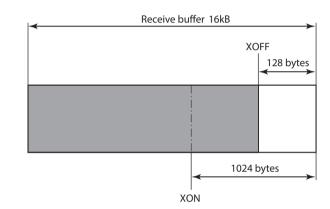

### **DTR Protocol**

#### Conditions when the DTR signal is "Ready (High)"

All the following conditions are satisfied.

- The receive buffer is 128 bytes or more available capacity.
  - \* When the receive buffer has less than 128 bytes available and the DTR signal has changed to BUSY (Low) status, BUSY status is maintained until the capacity of the receive buffer has reached 1024 bytes or more.

#### Conditions when DTR signal is "Busy (Low)"

• When the receive buffer has fallen to less than 128 bytes available.

### **USB** Interface

#### Specifications

Standards	Complies with Universal Serial Bus Specification 2.0
Transmission speed	Compatible with 12Mbps (full speed) transmission
Receive buffer	16 kB
Connector	15120-00410 (KST)

### Signal line and pin arrangement

	Pin No.	Signal code	Signal	Function
	1	VBUS	USB power	USB power (+5V)
Γ	2	D-	Signal line –	+ signal line
	3	D+	Signal line +	– signal line
	4	GND	GND	GND

## Parallel Interface (Option)

#### Specifications

Transmission mode	8-bit parallel data
Receive buffer size	16 kB
Transmission modes	<b>Compatible mode:</b> It is an asynchronous forward direction of the byte width (from host to printer) channel, and the interface line of the data is operated in accordance with signal line definitions of Centronics.
	NIBBLE mode: Nibble mode is asynchronous reverse channel communication with data transmission controlled by the host computer. In reverse channel transmission, the data is nibble transmitted in two parts using four status lines (Fault, Select, PE, and Busy). And nibble mode can be used along with compatible mode to send data in two directions.
	<b>ECP mode:</b> ECP mode permits bi-directional asynchronous data transmission, and thanks to its interlock handshake, it does not require the timing necessary with compatible mode.
Signal level	IEEE1284 standard

### Signal line and pin assignment table


Pin No.	Signal name	I/O	Function
1	*STROBE	Input	Strobe signal to read in 8-bit data
2-9	DATA1-8	Input	8-bit parallel signal
10	*ACKNLG	Output	8-bit data request signal
11	BUSY	Output	Signal specifying printer busy
12	PERROR	Output	Signal specifying media out
13	SELECT	Output	Signal specifying if the printer is on-line (printing enabled) or off-line (pausing)
14	AUTOFD	Input	Invalid (ignored)
15	NC	-	Not used
16	GND	-	Signal ground
17	FGND	-	Frame ground
18	P.L.H	Output	Peripheral logic high (pull up to +5 V at 1 k $\Omega$ )
19-30	GND	-	Ground for twisted pair return
31	*INIT	Input	Printer reset
32	*FAULT	Output	Signal specifying printer error
33-35	NC	-	Not used
36	SELECTIN	Input	Invalid (ignored)

#### Parallel port status signals when an error occurs

The status of a signal line will not be changed in bi-directional mode such as nibble or ECP mode.


Error	Change in the status of a signal line in compatible mode
Paper end	Busy $: L \rightarrow H$ PError $: L \rightarrow H$ Select $: H \rightarrow L$ nFault $: H \rightarrow L$
Error other than paper end • Head open • Other	Busy : L → H PError : L → unchanged Select : H → L nFault : H → L
Conditions for Busy	Receive buffer full     Oata being read     Error

### Compatible timing specification

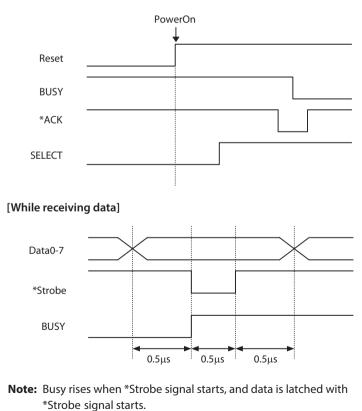


[When power is on] (Time it goes off-line)

#### [While receiving INIT signal]

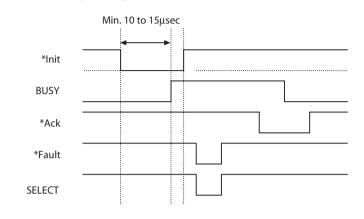

**Note:** If the \*Init signal does not have width of 10 to 15µsec or more, it cannot act as an Init signal. If it is lower, the \*Init signal is ignored. BUSY starts up when the \*Init signal is perceived.

#### **Relation of the timing of the BUSY signal and the \*ACK signal** [Center – ACK]

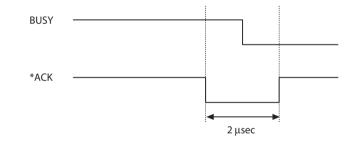

## **CITIZEN SYSTEMS AMERICA CORPORATION**

1411 West 190th Street, Suite 675 Gardena, CA 90248 Tel: (310) 781-1460 Fax:(310) 781-9152 http://www.citizen-systems.com

## **CITIZEN SYSTEMS EUROPE GmbH**

 Otto-Hirsch-Brücken 17
 E

 70329 Stuttgart
 S

 Germany
 L

 Tel: +49 (0) 711 49032-0
 T

 Fax:+49 (0) 711 49032-45
 F

 http://www.citizen-europe.com
 F

Elizabeth House, 56-60 London Road Staines-Upon-Thames, TW18 4HF United Kingdom Tel: +44 (0) 20 8893 1900 Fax: +44 (0) 20 8893 0080

## CITIZEN SYSTEMS JAPAN CO., LTD.

6-1-12, Tanashi-cho, Nishi-Tokyo-shi Tokyo, 188-8511. Japan Tel: +81 (0) 42 468 4608 Fax:+81 (0) 42 468 4687 https://www.citizen-systems.co.jp/printer/