

# CITIZEN

## **JavaPOS DRIVER 1.14** **for 64bit**

### **Setup Guide**

**For Ver. 1.14.0.5**

**CITIZEN SYSTEMS JAPAN CO., LTD.**

**Revision Record**

Date	Version	Description
Dec 25, 2012	1.11.2.7a	New release for Ethernet of Linux 64bit OS.
Mar 11, 2013	1.11.2.8	- Changed the installation files of this product. - Changed the jpos.xml setting example.
Jan 17, 2014	1.11.3.0	Updated the version number only.
Feb 16, 2015	1.11.3.2	- The CT-S251, CT-S601II/651II/801II/851II model was added to each item.
Sep 30, 2015	1.11.3.3	- Added Windows to the supported OS. - Added USB to the supported interface. - Added CT-S281 and CT-S310II to the supported models.
Nov 28, 2016	1.11.3.4	- Added CT-D150 and CT-E351 to the supported models.
Jun 13, 2017	1.11.3.5	- Added CT-D151 and CT-E651 to the supported models.
Jan 7, 2019	1.14.0.1	- Supported JavaPOS1.14 - Added CT-S751 and PMU2300III to the supported models.
Feb 12, 2019	1.14.0.2	- Added CT-S4500 to the supported models.
Dec 14, 2020	1.14.0.3	- Added CT-D151-L, CT-E651-L and PMU3300 to the supported models.
Apr 13, 2021	1.14.0.4	- Added CT-D101, CT-E301 and CT-E601 to the supported models.
Aug 25, 2023	1.14.0.5	- Added CT-S801III and CT-S851III to the supported models. (Page 6,7,30)

**Notes**

1. Unauthorized use of all or any part of this document is prohibited.
2. The information in this document is subject to change without prior notice.
3. This document has been created with full attention. If, however, you find an error or question, please contact us.
4. We shall not be liable for any effect resulting from operation regardless of the above item 3.
5. If you do not agree with the above terms, you are not permitted to use this driver.

**Trademark**

Microsoft, Windows are registered trademarks of Microsoft Corporation in the United States and/or other countries. (Official name for Windows is Microsoft Windows Operating System.)

Java is registered trademarks of Sun Microsystems, Inc. in the United States and/or other countries.

Company names and product names appearing on this document are trademarks and/or registered trademarks of respective companies.

CITIZEN is a registered trademark of Citizen Watch Co., Ltd.

## **Index**

<b>1. About the Product.....</b>	<b>5</b>
<b>2. Operating Environments.....</b>	<b>5</b>
2.1. Operating System.....	5
2.2. Java Virtual Machine.....	5
2.3. Supported Models.....	5
2.4. USB Interface Connection of the Windows environment.....	7
<b>3. Installation .....</b>	<b>9</b>
3.1. Pre-Installation Instructions.....	9
3.2. Installation Steps for Windows.....	9
3.3. Installation Steps for Linux .....	13
3.4. How to use the Driver for windows.....	15
3.5. How to use the Driver for Linux .....	15
3.6. Setting of JavaPOS entry .....	16
<b>4. Printer Setting .....</b>	<b>17</b>
4.1. CT-D101 Series .....	17
4.2. CT-D150 Series .....	18
4.3. CT-D151 Series .....	19
4.4. CT-E301 Series.....	20
4.5. CT-E351 Series.....	21
4.6. CT-E601 Series.....	22
4.7. CT-E651 Series .....	23
4.8. CT-S251 Series.....	24
4.9. CT-S281 Series.....	25
4.10. CT-S310 Series .....	26
4.11. CT-S310II Series.....	27
4.12. CT-S601/651/801/851 Series .....	28
4.13. CT-S601II/651II/801II/851II Series.....	29
4.14. CT-S801III/851III Series .....	30
4.15. CT-S751 Series .....	31
4.16. CT-S2000 Series .....	32
4.17. CT-S4000 Series .....	33
4.18. CT-S4500 Series .....	34

## **1. About the Product**

This driver provides an open device driver architecture that can easily integrate the CITIZEN POS printer and the cash drawer connected to it by the POS system based on Java.

## **2. Operating Environments**

### **2.1. Operating System**

This driver supports the following operating systems.

- Windows7, Windows10, Windows11 (64bit)
- Linux (64bit)

\* Tested Linux OS: CentOS7, Ubuntu18.04

### **2.2. Java Virtual Machine**

This driver supports the following 64bit Java Virtual Machine.

- Version 5 and higher

\* Tested version: Version 6 Update 45, Version 7 Update 72, Version 8 Update 201, OpenJDK 11.0.9

### **2.3. Supported Models**

Supported models of this product and the corresponding interface are as shown below.

For details of each model, refer to the Printer User's Guide.

**Windows environment**

Series of Model	Supported Model	Interface	Printer Functions
CT-D101	CT-D101	USB, Ethernet	Standard
CT-D150	CT-D150	USB, Ethernet	Standard
CT-D151	CT-D151	USB, Ethernet	Standard
	CT-D151-L		Blackmark/Label paper is supported
CT-E301	CT-E301	USB, Ethernet	Standard
CT-E351	CT-E351	USB, Ethernet	Standard
CT-E601	CT-E601	USB, Ethernet	Standard
CT-E651	CT-E651	USB, Ethernet	Standard
	CT-E651-L		Blackmark/Label paper is supported
CT-S251	CT-S251	USB, Ethernet	Standard
CT-S281	CT-S281/281BT/281BD	USB	Standard
	CT-S281-XL-M1		Blackmark paper is supported
	CT-S281-XL		Label paper is supported.
CT-S310	CT-S310	USB, Ethernet	Standard (Paper with blackmark on front side is supported.)
	CT-S310-M1/M2		Paper with blackmark on back side is supported.
CT-S310II	CT-S310II	USB, Ethernet	Standard
CT-S601/651/801/851	CT-S601/651/801/851	USB, Ethernet	Standard
	CT-S801/851-M		Blackmark paper is supported
	CT-S801-L		Label paper is supported.
CT-S601II/651II/801II/851II	CT-S601II/651II/801II/851II	USB, Ethernet	Standard
	CT-S801II/851II-M		Blackmark paper is supported
	CT-S801II-L		Label paper is supported.
CT-S801III/851III	CT-S801III/851III	USB, Ethernet	Standard
CT-S751	CT-S751	USB, Ethernet	Standard
CT-S2000	CT-S2000	USB, Ethernet	Standard
	CT-S2000-M		Blackmark paper is supported
	CT-S2000-L		Label paper is supported.
CT-S4000	CT-S4000	USB, Ethernet	Standard (Paper with blackmark on front side is supported.)
	CT-S4000-M		Paper with blackmark on back side is supported.
	CT-S4000-L		Label paper is supported.
CT-S4500	CT-S4500	USB, Ethernet	Standard (Blackmark/Label paper is supported)
PMU2300III	PMU2300III	USB	Standard (With presenter)
PMU3300	PMU3300	USB	Standard (Paper exit sensor is supported.)


**Linux environment**

Series of Model	Supported Model	Interface	Printer Functions
CT-D101	CT-D101	USB, Ethernet	Standard
CT-D150	CT-D150	USB, Ethernet	Standard
CT-D151	CT-D151	USB, Ethernet	Standard
	CT-D151-L		Blackmark/Label paper is supported
CT-E301	CT-E301	USB, Ethernet	Standard
CT-E351	CT-E351	USB, Ethernet	Standard
CT-E601	CT-E601	USB, Ethernet	Standard
CT-E651	CT-E651	USB, Ethernet	Standard
	CT-E651-L		Blackmark/Label paper is supported
CT-S251	CT-S251	USB, Ethernet	Standard
CT-S281	CT-S281/281BT/281BD	USB	Standard
	CT-S281-XL-M1		Blackmark paper is supported
	CT-S281-XL		Label paper is supported.
CT-S310	CT-S310	USB, Ethernet	Standard (Paper with blackmark on front side is supported.)
	CT-S310-M1/M2		Paper with blackmark on back side is supported.
CT-S310II	CT-S310II	USB, Ethernet	Standard
CT-S601/651/801/851	CT-S601/651/801/851	USB, Ethernet	Standard
	CT-S801/851-M		Blackmark paper is supported
	CT-S801-L		Label paper is supported.
CT-S601II/651II/801II/851II	CT-S601II/651II/801II/851II	USB, Ethernet	Standard
	CT-S801II/851II-M		Blackmark paper is supported
	CT-S801II-L		Label paper is supported.
CT-S801III/851III	CT-S801III/851III	USB, Ethernet	Standard
CT-S751	CT-S751	USB, Ethernet	Standard
CT-S2000	CT-S2000	USB, Ethernet	Standard
	CT-S2000-M		Blackmark paper is supported
	CT-S2000-L		Label paper is supported.
CT-S4000	CT-S4000	USB, Ethernet	Standard (Paper with blackmark on front side is supported.)
	CT-S4000-M		Paper with blackmark on back side is supported.
	CT-S4000-L		Label paper is supported.
CT-S4500	CT-S4500	USB, Ethernet	Standard (Blackmark/Label paper is supported)
PMU2300III	PMU2300III	USB	Standard (With presenter)
PMU3300	PMU3300	USB	Standard (Paper exit sensor is supported.)

**2.4. USB Interface Connection of the Windows environment**

Installation of printer driver is required when using this product with USB connection of the Windows environment. Perform the installation of Windows Driver. Designate USB Interface Port (Virtual Printer Port for USB) which is designated by the Windows Driver at JavaPOS Driver side.

This driver cannot be used with the status function (language monitor) of the Windows driver that shows the printer status. When using this driver, **install the Windows driver without the status function, or uncheck the "Enable bidirectional support" option under the Ports setting of the Windows driver.** (Need to reboot the computer in order for the changes to take effect.)

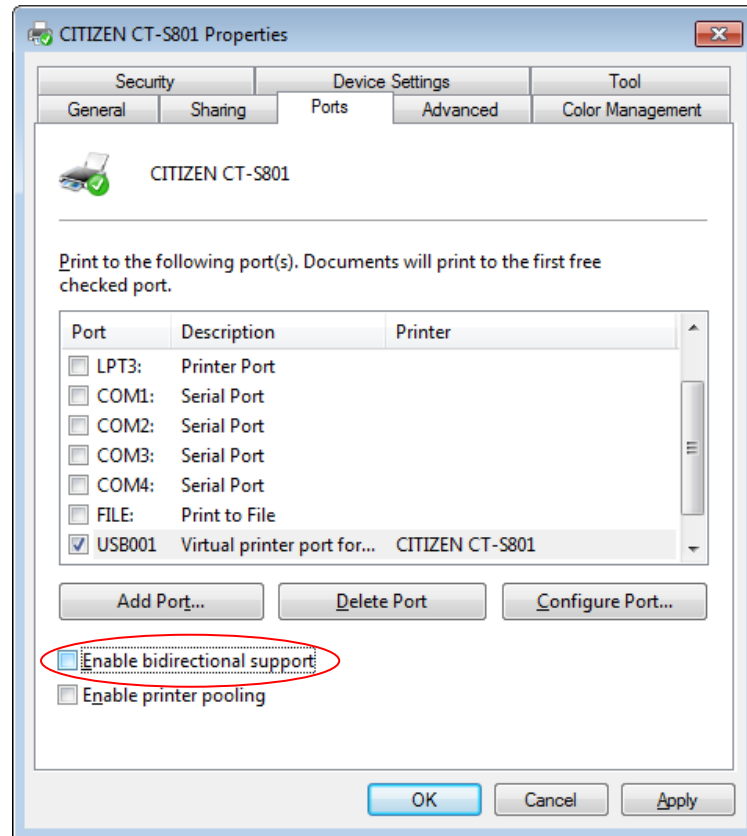



### 3. Installation

#### 3.1. Pre-Installation Instructions

Please download the file according to your operating system from the URL below to get the latest Java for your computer and install the Java run time environment in your system.

Note that Java version 5 or higher is required.


<http://www.java.com/>

Before installation, shut down all applications in operation.


The installer should be run with Administrator (Windows) or root (Linux) privileges.

#### 3.2. Installation Steps for Windows


- 1) The installer for Windows is "CSJ\_JPOSxxxxx\_setup64EN.exe" (xxxxx is version number).  
To run the installer, double click on it. After starting, follow the installation procedure in accordance with the dialog.
- 2) Setup wizard starts. Click [Next].

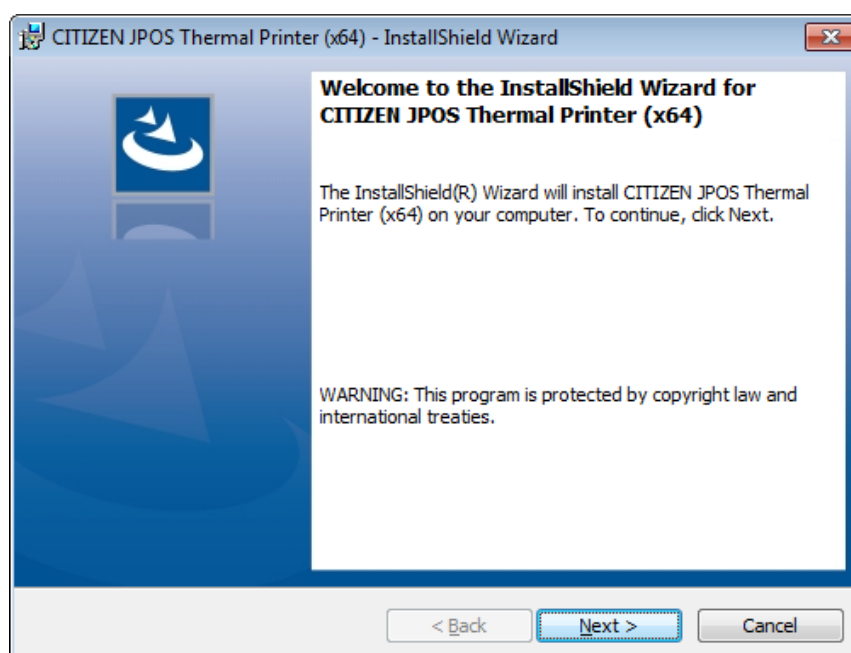


- 3) "License Agreement" window is displayed. If you agree with the product license agreement, select "I accept the terms in the license agreement" and click [Next]. If you do not agree with the product license agreement, select "I do not accept the terms in the agreement" and click [Next] to exit the wizard.

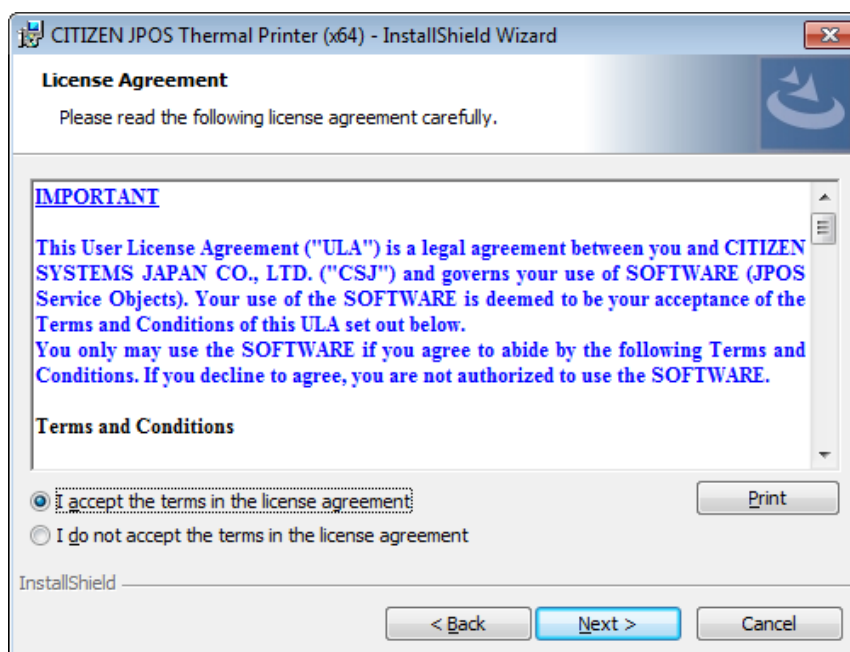


- 4) "Destination Folder" window is displayed. Specify the folder to install. If you use a default folder, click [Next]. If you want to change the folder, change the folder you want to install.

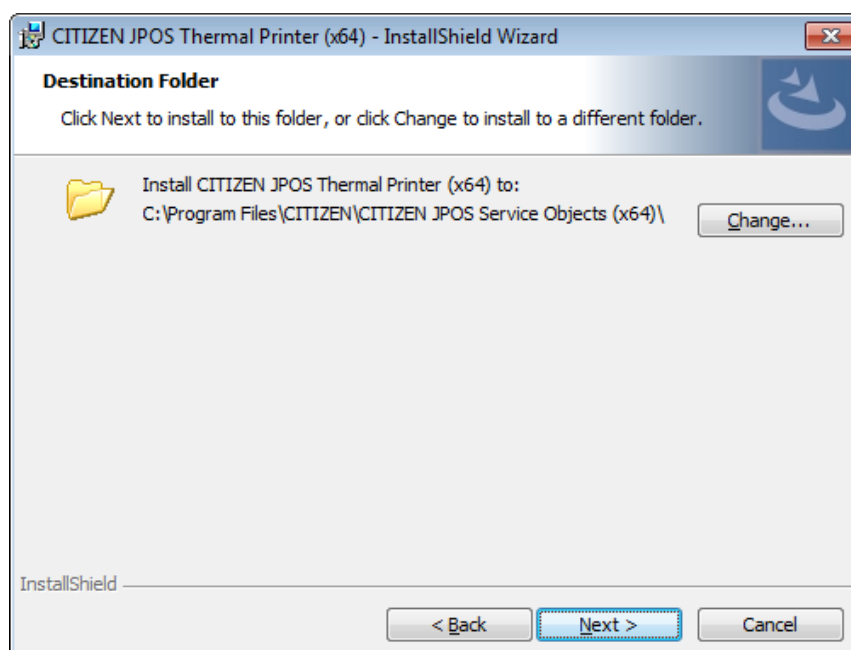


- 5) Click [Install] to begin the installation.

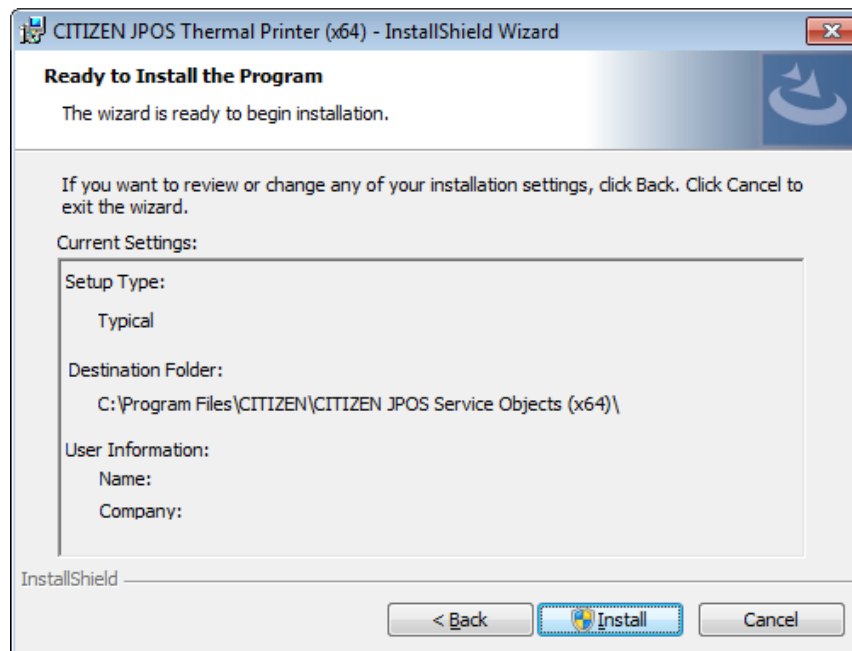

- 6) The installation progress status window is displayed. (It may take longer time to install depending on the environment or specifications of the terminal.)

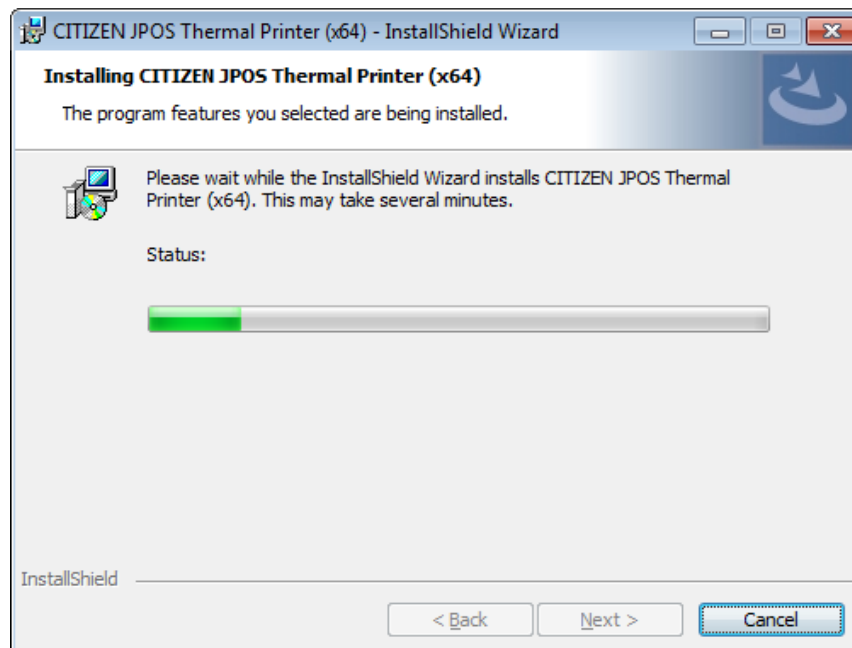

- 7) When the installation is successful, "Installation Completed" window is displayed. Click [Close].

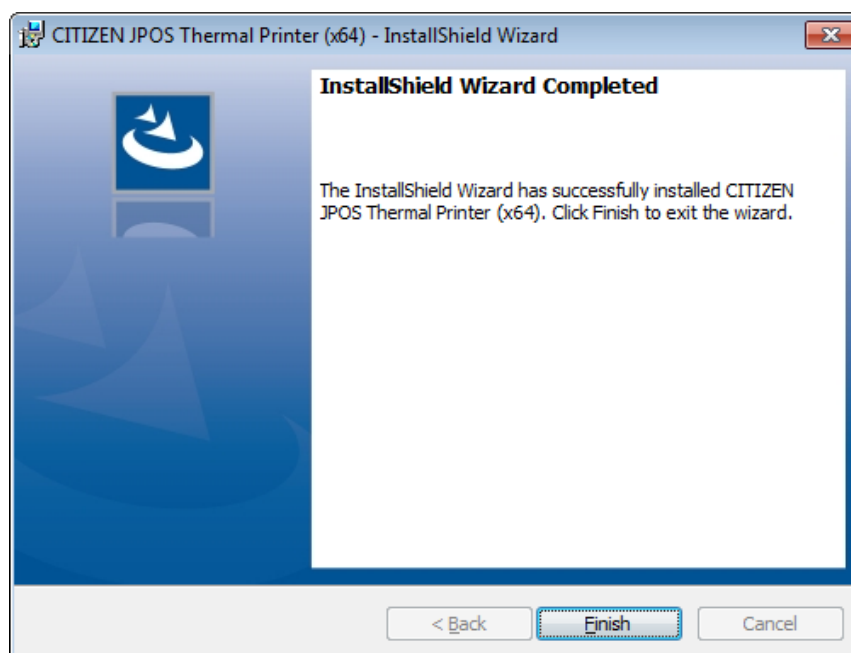


- 8) The following provides the description on the installation files of this product.

c:\program files\CITIZEN\CITIZEN JPOS Service Object (64bit) (default)

JPOSApplication.bat	: Test application execute file
JPOSConfig.bat	: Configuration (JCL) execute file
jpos.xml	: JavaPOS configuration file
CBMjpos.jar	: CITIZEN JavaPOS driver library
JPOSApplication.jar	: Test application library
jcl.jar	: jpos.config/loader (JCL) library
javapos-1.14.1.jar	: JavaPOS service object library
lib\comm.jar	: Library for driver
lib\jna.jar	: Library for driver
lib\xerces2.jar	: Library for driver
lib\xerces-2.6.0.jar	: Library for driver
lib\swing-layout-1.0.jar	: Library for test application
CSJjposBcw.dll	: Expansion library for driver
CSJjposCom.dll	: Expansion library for driver
ReleaseNotes_EN.txt	: Release Notes file
Log	: Work folder for test application
Macro	: Work folder for test application
Sample	: Sample code folder

### 3.3. Installation Steps for Linux

- 1) The installer for Linux is "CSJ\_JPOSxxxxx\_setup64EN.bin" (xxxxx is version number, self-extracting file). To run the installer, open the terminal window, change to the directory in which the installer is located, and type `./CSJ_JPOSxxxxx_setpu64EN.bin` (xxxxx is version number). After starting, follow the installation procedure in accordance with the dialog.
- 2) Installer starts. Type the space key.

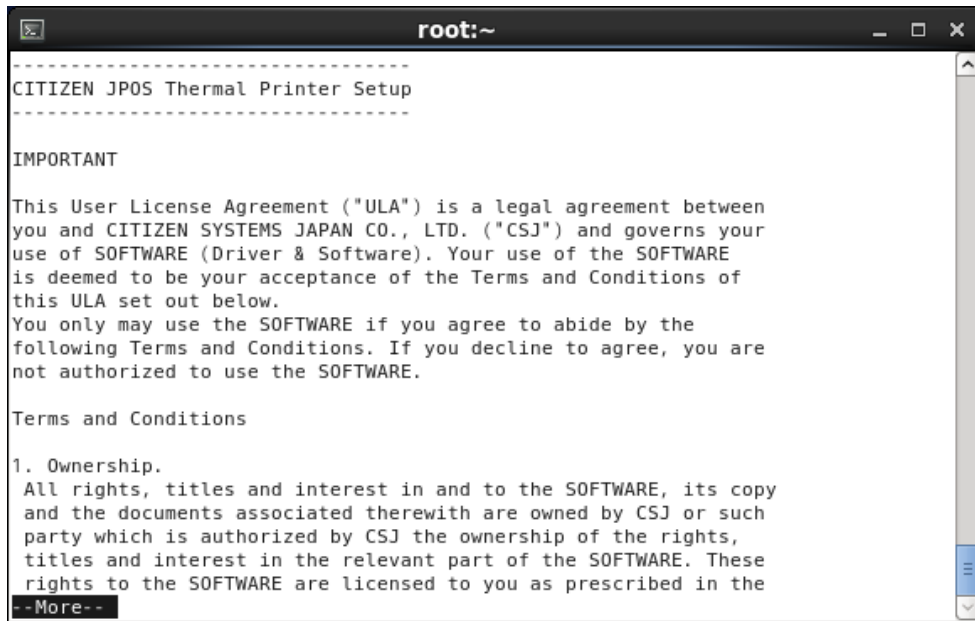

```

root:~
-----
CITIZEN JPOS Thermal Printer Setup
-----

IMPORTANT


This User License Agreement ("ULA") is a legal agreement between
you and CITIZEN SYSTEMS JAPAN CO., LTD. ("CSJ") and governs your
use of SOFTWARE (Driver & Software). Your use of the SOFTWARE
is deemed to be your acceptance of the Terms and Conditions of
this ULA set out below.
You only may use the SOFTWARE if you agree to abide by the
following Terms and Conditions. If you decline to agree, you are
not authorized to use the SOFTWARE.

Terms and Conditions

1. Ownership.
All rights, titles and interest in and to the SOFTWARE, its copy
and the documents associated therewith are owned by CSJ or such
party which is authorized by CSJ the ownership of the rights,
titles and interest in the relevant part of the SOFTWARE. These
rights to the SOFTWARE are licensed to you as prescribed in the
--More--

```

- 3) If you agree with the product license agreement, type "yes". If you do not agree with the product license agreement, type "no" to exit.

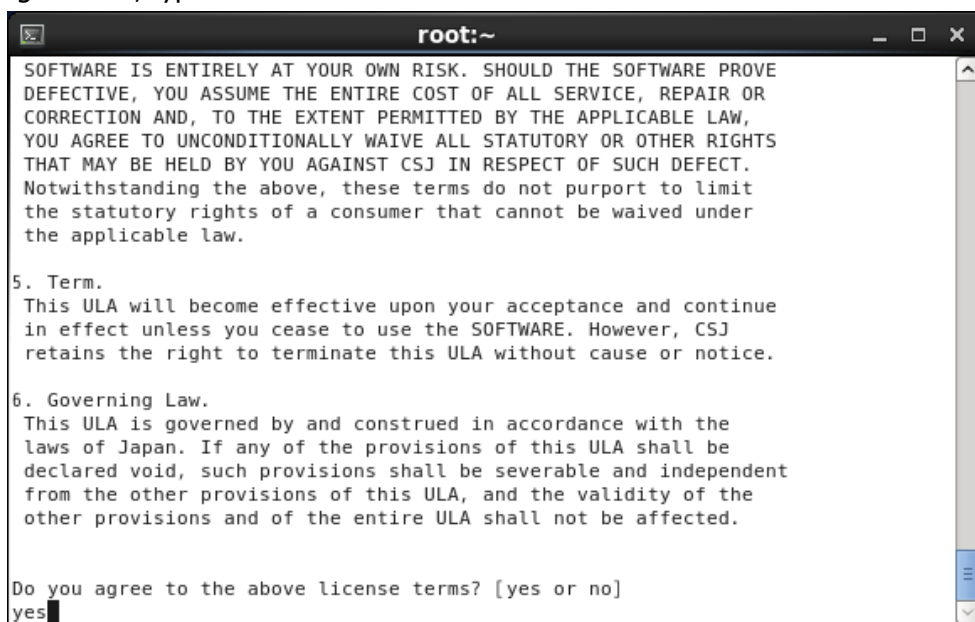

```

root:~
SOFTWARE IS ENTIRELY AT YOUR OWN RISK. SHOULD THE SOFTWARE PROVE
DEFECTIVE, YOU ASSUME THE ENTIRE COST OF ALL SERVICE, REPAIR OR
CORRECTION AND, TO THE EXTENT PERMITTED BY THE APPLICABLE LAW,
YOU AGREE TO UNCONDITIONALLY WAIVE ALL STATUTORY OR OTHER RIGHTS
THAT MAY BE HELD BY YOU AGAINST CSJ IN RESPECT OF SUCH DEFECT.
Notwithstanding the above, these terms do not purport to limit
the statutory rights of a consumer that cannot be waived under
the applicable law.

5. Term.
This ULA will become effective upon your acceptance and continue
in effect unless you cease to use the SOFTWARE. However, CSJ
retains the right to terminate this ULA without cause or notice.

6. Governing Law.
This ULA is governed by and construed in accordance with the
laws of Japan. If any of the provisions of this ULA shall be
declared void, such provisions shall be severable and independent
from the other provisions of this ULA, and the validity of the
other provisions and of the entire ULA shall not be affected.

Do you agree to the above license terms? [yes or no]
yes

```

- 4) When the installation is successful, installed places is displayed.

```

root:~
CSJ_JP0S11133_Linux64EN/lib/jna.jar
CSJ_JP0S11133_Linux64EN/lib/LinuxCommLib.jar
CSJ_JP0S11133_Linux64EN/lib/xerces-2.6.0.jar
CSJ_JP0S11133_Linux64EN/libCSJjposCom.so
CSJ_JP0S11133_Linux64EN/JPOSApplication.jar
CSJ_JP0S11133_Linux64EN/jcl.jar
CSJ_JP0S11133_Linux64EN/jpos.xml
CSJ_JP0S11133_Linux64EN/CBMjpos.jar
CSJ_JP0S11133_Linux64EN/Sample/
CSJ_JP0S11133_Linux64EN/Sample/Sample01.bmp
CSJ_JP0S11133_Linux64EN/Sample/Sample.java
CSJ_JP0S11133_Linux64EN/JPOSConfig.sh
CSJ_JP0S11133_Linux64EN/libCSJjposBcw.so
CSJ_JP0S11133_Linux64EN/ReleaseNotes_EN.txt
CSJ_JP0S11133_Linux64EN/JPOSApplication.sh
CSJ_JP0S11133_Linux64EN/Log/

Done.

CITIZEN JP0S Service Objects was installed in the following places.

    /usr/local/CITIZEN/JP0S_Service_Objects

#

```

5) The following provides the description on the installation files of this product.

/usr/local/CITIZEN/JP0S_Service_Object	
JPOSApplication.sh	: test application execute file
JPOSConfig.sh	: configuration (JCL) execute file
jpos.xml	: JavaPOS configuration file
CBMjpos.jar	: CITIZEN JavaPOS driver library
JPOSApplication.jar	: Test application library
jcl.jar	: jpos.config/loader (JCL) library
javapos-1.14.1.jar	: JavaPOS service object library
lib/LinuxCommAPI.jar	: Library for driver
lib/LinuxCommLib.jar	: Library for driver
lib/comm.jar	: Library for driver
lib/jna.jar	: Library for driver
lib/xerces2.jar	: Library for driver
lib/xerces-2.6.0.jar	: Library for driver
lib/swing-layout-1.0.jar	: Library for test application
libCSJjposBcw.so	: Expansion library for driver
libCSJjposCom.so	: Expansion library for driver
ReleaseNotes_EN.txt	: Release Notes file
Log	: work directory for test application
Macro	: work directory for test application
Sample	: sample code directory

### 3.4. How to use the Driver for windows

Change to the Windows installation folder and double clicking the following file.

For starting the test application

JPOSApplication.bat

For starting the JPOS entry editor

JPOSConfig.bat

### 3.5. How to use the Driver for Linux

Open the terminal window and change to the Linux installation directory and type the following command on the command prompt.

For starting the test application

./JPOSApplication.sh

For starting the JPOS entry editor

./JPOSConfig.sh

### 3.6. Setting of JavaPOS entry

In order for Control Object to be connected to Service Object exactly and initialize the corresponding device, the JavaPOS control requires data of the jpos.xml file.

The following is the jpos.xml setting when it connects CT-S801II (printer) by USB as an example. It is necessary to revise a value of "PortName".

```
<JposEntry logicalName="CITIZEN S801II USB Windows">
  <creation factoryClass="jpos.loader.simple.SimpleJPOSServiceInstanceFactory"
    serviceClass="jpos.services.Citizen801IIPrinterServices"/>
  <vendor name="CITIZEN" url="http://www.citizen-systems.co.jp"/>
  <jpos category="POSPrinter" version="1.14"/>
  <product description="Jpos printer driver" name="CITIZEN CT-S801II POS printer"
    url="http://www.citizen-systems.co.jp"/>

  <prop name="WriteTimeout" type="String" value="5000"/>
  <prop name="PhysicalDevice" type="String" value="CITIZEN CT-S801II POS Printer"/>
  <prop name="PortName" type="String" value="USB001"/>
  <prop name="PrinterLanguage" type="String" value="0"/>
  <prop name="ResponseCheck" type="String" value="1"/>
  <prop name="Columns" type="String" value="48"/>
  <prop name="CharacterSet" type="String" value="437"/>
  <prop name="UseNVRAM" type="String" value="0"/>
  <prop name="Grayscale" type="String" value="0"/>
  <prop name="PaperModel" type="String" value="80mm"/>
  <prop name="deviceBus" type="String" value="USB"/>
</JposEntry>
```

The following is the jpos.xml setting when it connects CT-S801II (printer) by Ethernet as an example. It is necessary to revise a value of "PortName" and "IPAddress".

```
<JposEntry logicalName="CITIZEN S801II Ethernet Windows">
  <creation factoryClass="jpos.loader.simple.SimpleJPOSServiceInstanceFactory"
    serviceClass="jpos.services.Citizen801IIPrinterServices"/>
  <vendor name="CITIZEN" url="http://www.citizen-systems.co.jp"/>
  <jpos category="POSPrinter" version="1.14"/>
  <product description="Jpos printer driver" name="CITIZEN CT-S801II POS printer"
    url="http://www.citizen-systems.co.jp"/>

  <prop name="WriteTimeout" type="String" value="5000"/>
  <prop name="PhysicalDevice" type="String" value="CITIZEN CT-S801II POS Printer"/>
  <prop name="PortName" type="String" value="IP_192.168.82.21"/>
  <prop name="PrinterLanguage" type="String" value="0"/>
  <prop name="PortNumber" type="String" value="9100"/>
  <prop name="ResponseCheck" type="String" value="1"/>
  <prop name="CharacterSet" type="String" value="437"/>
  <prop name="Columns" type="String" value="48"/>
  <prop name="UseNVRAM" type="String" value="0"/>
  <prop name="Grayscale" type="String" value="0"/>
  <prop name="PaperModel" type="String" value="80mm"/>
  <prop name="deviceBus" type="String" value="Ethernet"/>
  <prop name="IPAddress" type="String" value="192.168.82.21"/>
</JposEntry>
```



## 4. Printer Setting

Using this product assumes that the DIP switch and memory switch of the printer are set as shown below. For the details of the method of operating each switch and the content of setting, refer to User's Guide of each model.

### 4.1. CT-D101 Series

#### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-

## 4.2. CT-D150 Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-

### 4.3. CT-D151 Series

#### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-
13-6	Auto Reconnect (when Bluetooth I/F is used)	Invalid	-

#### 4.4. CT-E301 Series

##### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-

## 4.5. CT-E351 Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Cttr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-

## 4.6. CT-E601 Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-
13-6	Auto Reconnect (when Bluetooth I/F is used)	Invalid	-

## 4.7. CT-E651 Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-
13-6	Auto Reconnect (when Bluetooth I/F is used)	Invalid	-

## 4.8. CT-S251 Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Auto cutter restore	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char	100% / 100%	-
8-6	Auto Side Shift	Invalid	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-3	Kanji	ON	-
9-4	JIS/Shift-JIS	SJIS(CP932)	-
13-6	Auto Reconnect (when Bluetooth interface is used)	Invalid	-



## 4.9. CT-S281 Series

### **DIP Switch Setting**

<b>DSW No.</b>	<b>Function</b>	<b>Setting</b>	<b>Description</b>
8	INIT (when serial interface is used)	OFF	Disabled

### **Memory Switch Setting**

<b>MSW No.</b>	<b>Function</b>	<b>Setting</b>	<b>Description</b>
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full column print	WaitData	-
3-1	Auto cutter restore	Valid	-
3-7	CBM270 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-3	Kanji	ON	-
9-4	JIS/Shift-JIS	Shift-JIS	-
13-6	Auto Reconnect (when Bluetooth interface is used)	Invalid	-

## 4.10. CT-S310 Series

### DIP Switch Setting

DSW No.	Function	Setting	Description
8	INIT (when serial interface is used)	OFF	Disabled

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Auto cutter restore	Close	-
3-2	PE output at PNE (when parallel IF are used)	Invalid	-
3-3	Parallel 31Pin (when USB and parallel IF are used)	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Forced partial	Invalid	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-3	Kanji	Enable	-
9-4	JIS/Shift-JIS	Shift JIS	-

## 4.11. CT-S310II Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
2-2	Auto cutter operation	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Auto Cutter	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Forced partial	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-3	Kanji	ON	-
9-4	JIS/Shift-JIS	Shift JIS	-

## 4.12. CT-S601/651/801/851 Series

### DIP Switch Setting

DSW No.	Function	Setting	Description
8	INIT (when serial interface is used)	OFF	Disabled

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Auto cutter restore	Close	-
3-2	PE output at PNE (when parallel IF are used)	Invalid	-
3-3	Parallel 31Pin (when USB and parallel IF are used)	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Forced partial	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-3	Kanji	Enable	-
9-4	JIS/Shift-JIS	Shift JIS	-
10-3	ACK Timing (when USB and parallel IF are used)	Before BUSY	-

### 4.13. CT-S601II/651II/801II/851II Series

#### **DIP Switch Setting**

DSW No.	Function	Setting	Description
8	INIT (when serial interface is used)	OFF	Disabled

#### **Memory Switch Setting**

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto cutter operation	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Auto Cutter	Valid	-
3-2	PE output at PNE (when parallel IF are used)	Invalid	-
3-3	Parallel 31Pin (when USB and parallel IF are used)	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Forced partial	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-byte Char	SJIS:CP932(JPN)	-
10-3	ACK Timing (when USB and parallel IF are used)	Before BUSY	-
13-6	Auto Reconnect (when Bluetooth interface is used)	Invalid	-

#### 4.14. CT-S801III/851III Series

##### **DIP Switch Setting**

DSW No.	Function	Setting	Description
8	INIT (when serial interface is used)	OFF	Disabled

##### **Memory Switch Setting**

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto cutter operation	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Auto Cutter	Valid	-
3-2	PE output at PNE (when parallel IF are used)	Invalid	-
3-3	Parallel 31Pin (when USB and parallel IF are used)	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Forced partial	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-byte Char	SJIS:CP932(JPN)	-
10-3	ACK Timing (when USB and parallel IF are used)	Before BUSY	-
13-6	Auto Reconnect (when Bluetooth interface is used)	Invalid	-

## 4.15. CT-S751 Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-
13-6	Auto Reconnect (when Bluetooth I/F is used)	Invalid	-

## 4.16. CT-S2000 Series

### DIP Switch Setting

DSW No.	Function	Setting	Description
8	INIT (when serial interface is used)	OFF	Disabled

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto cutter operation	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Auto Cutter	Valid	-
3-3	Parallel 31Pin (when USB and parallel IF are used)	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Forced partial	Invalid	-
5-2	Line Pitch	1/360	-
7-6	DMA Control	Valid	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-3	Kanji	ON	-
9-4	JIS/Shift-JIS	Shift JIS	-
10-3	ACK Timing (when USB and parallel IF are used)	Before BUSY	-



## 4.17. CT-S4000 Series

### DIP Switch Setting

DSW No.	Function	Setting	Description
8	INIT (when serial interface is used)	OFF	Disabled

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto cutter operation	Valid	-
2-4	Full column print	WaitData	-
3-1	Auto Cutter	Valid	-
3-3	Parallel 31Pin (when USB and parallel IF are used)	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Forced partial	Invalid	-
5-2	Line Pitch	1/360	-
5-5	Power OFF notify	Not send	-
7-6	DMA Control	Valid	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-3	Kanji	Enabled	-
9-4	JIS/Shift-JIS	Shift JIS	-
10-3	ACK output timing (when USB and parallel IF are used)	Before BUSY	-

## 4.18. CT-S4500 Series

### Memory Switch Setting

MSW No.	Function	Setting	Description
1-1	Power ON Info	Valid	-
1-2	Buffer Size	4K bytes	-
1-3	Busy Condition	Full	-
1-4	Receiving Error	Print ?	-
1-5	CR Mode	Ignored	-
1-7	DSR Signal (when serial interface is used)	Invalid	-
1-8	INIT Signal (when serial interface is used)	Invalid	-
2-2	Auto Cutter	Valid	-
2-4	Full Col Print	WaitData	-
3-1	Resume Ctrr Err	Valid	-
3-7	CBM1000 Mode	Valid	-
3-8	Resume Open Err	Close	-
4-8	Partial Only	Invalid	-
5-2	Line Pitch	1/360	-
6-1	Act. For Driver	Valid	-
7-6	DMA Control	Valid	-
8-4	Line Gap Reduce	Invalid	-
8-5	Reduced Char V/H	100% / 100%	-
9-1	Code Page	Katakana	-
9-2	Int'Char Set	Japan	-
9-4	Multi-Byte Char	SJIS:CP932(JPN)	-
13-6	Auto Reconnect (when Bluetooth I/F is used)	Invalid	-

CITIZEN JavaPOS DRIVER 1.14 for 64bit Setup Guide

August 25, 2023 For Ver. 1.14.0.5

CITIZEN SYSTEMS JAPAN CO., LTD.

<https://csj.citizen.co.jp/>